



MEDALPOWER

# INVERTER

**11KVA/48v**  
**Hybrid Solar Inverter**  
**MPI-11000W#48VPVT**



[www.medal-power.com](http://www.medal-power.com)



# Table Of Contents

|   |           |
|---|-----------|
| <b>1 About This Manual</b> .....          | <b>1</b>  |
| 1.1 Purpose.....                          | 1         |
| 1.2 Scope.....                            | 1         |
| <b>2 Safety Instructions</b> .....        | <b>1</b>  |
| <b>3 Introduction</b> .....               | <b>2</b>  |
| 3.1 Features.....                         | 2         |
| 3.2 Basic System Architecture.....        | 2         |
| 3.3 Product Overview.....                 | 3         |
| <b>4 Installation</b> .....               | <b>5</b>  |
| 4.1 Unpacking And Inspection .....        | 5         |
| 4.2 Preparation .....                     | 6         |
| 4.3 Mounting The Unit.....                | 6         |
| 4.4 Battery Connection.....               | 7         |
| 4.5 Ac Input/Output Connection.....       | 8         |
| 4.6 PV Connection.....                    | 9         |
| 4.7 Final Assembly.....                   | 10        |
| 4.8 Communication Connection .....        | 11        |
| <b>5 Operation</b> .....                  | <b>11</b> |
| 5.1 Power On/off.....                     | 11        |
| 5.2 Operation and Display Pane .....      | 12        |
| 5.3 LCD Stting.....                       | 19        |
| 5.4 Battery Equalization Description..... | 26        |
| 5.5 Fantion and alarm description.....    | 28        |
| <b>6 Trouble removeal</b> .....           | <b>30</b> |
| <b>7 Technical datasjeet</b> .....        | <b>31</b> |
| <b>Appendix I:Parallel function</b> ..... | <b>32</b> |
| 1 Introduction.....                       | 32        |
| 2 PackContens.....                        | 32        |
| 3 Parallel board installation.....        | 32        |
| 4 Mounting the Unit.....                  | 34        |
| 5 Wiring Connection.....                  | 34        |
| 6 PV Connection.....                      | 44        |
| 7 LCD Setting and Display.....            | 45        |
| 8 Commissioning.....                      | 46        |



# 1 About This Manual

## 1.1 Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations, Keep manual for future reference.

## 1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

# 2 Safety Instructions



**WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.**

1. Before using the unit read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION**-To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION**-Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals, Please refer to INSTALLATION section of this manual for the details
10. One piece of 150A fuse is provided as over-current protection for the battery supply.
11. **GROUNDING INSTRUCTIONS** -This inverter/ charger should be connected to a permanent grounder wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

### 3 Introduction

This is a multi-function Inverter/charger, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

#### 3.1 Features

- ◆ Pure sine wave inverter
- ◆ Configurable input voltage range for home appliances and personal computers via LCD setting
- ◆ Configurable battery charging current based on applications via LCD setting
- ◆ Configurable AC/Solar Charger priority via LCD setting
- ◆ Compatible to mains voltage or generator power
- ◆ Auto restart while AC is recovering
- ◆ Overload/Over temperature/short circuit protection
- ◆ Smart battery charger design for optimized battery performance
- ◆ Cold start function


#### 3.2 Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- ◆ Generator or Utility
- ◆ PV modules


Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.

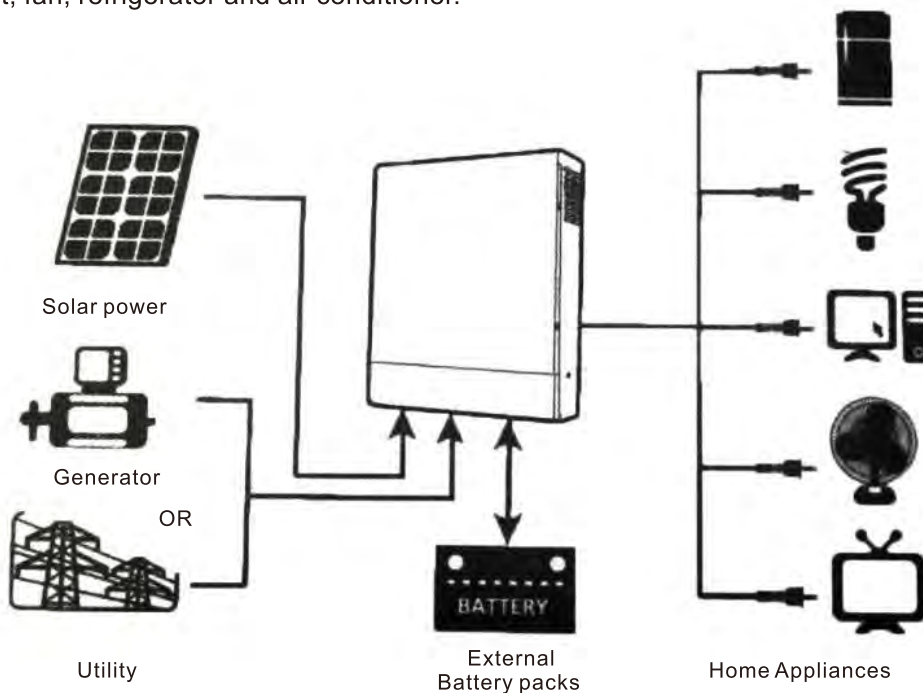


### 3.3 Product Overview


#### 3.3.1 LCD Screen

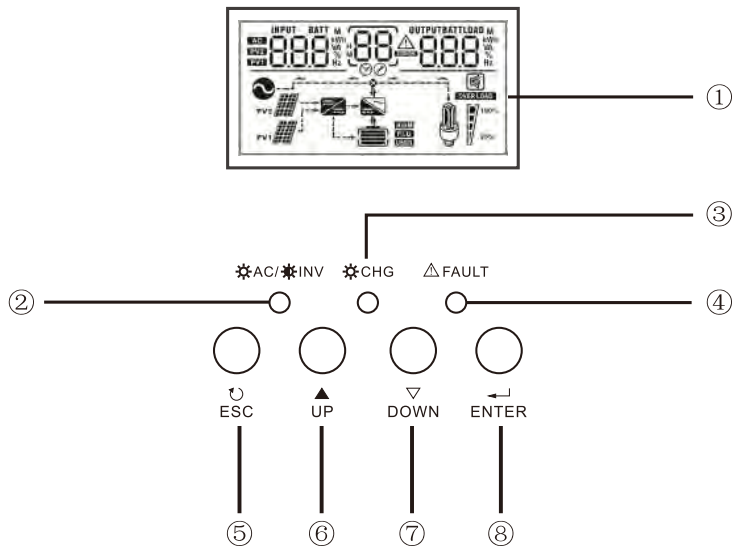


- |                          |             |
|--------------------------|-------------|
| 1.....LCD display        | 5.....ESC   |
| 2.....Status indicator   | 6.....UP    |
| 3.....Charging indicator | 7.....DOWN  |
| 4.....Fault indicator    | 8.....ENTER |

#### 3.3.2 Back Panel

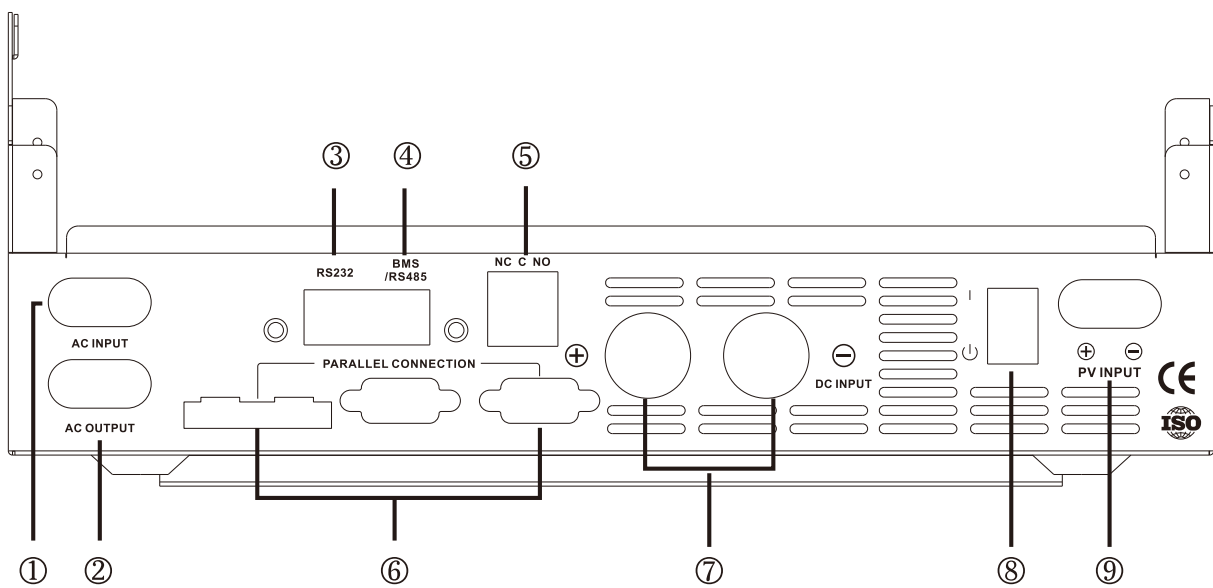


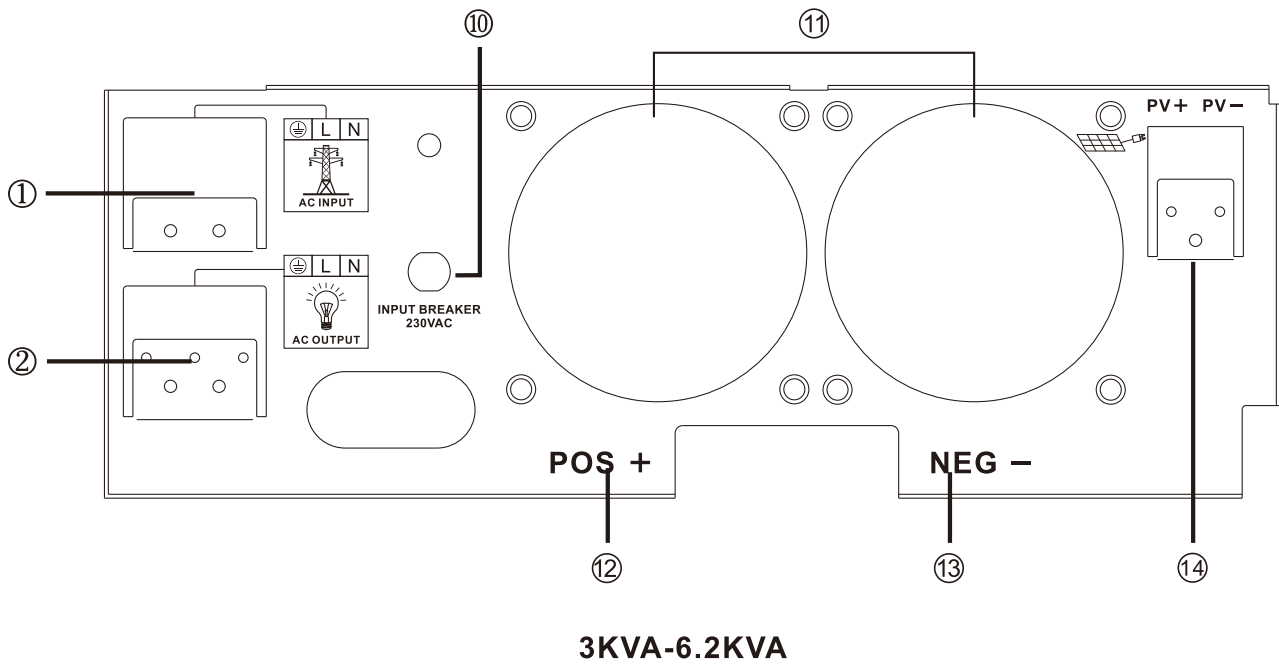


### Dual Output Back Panel

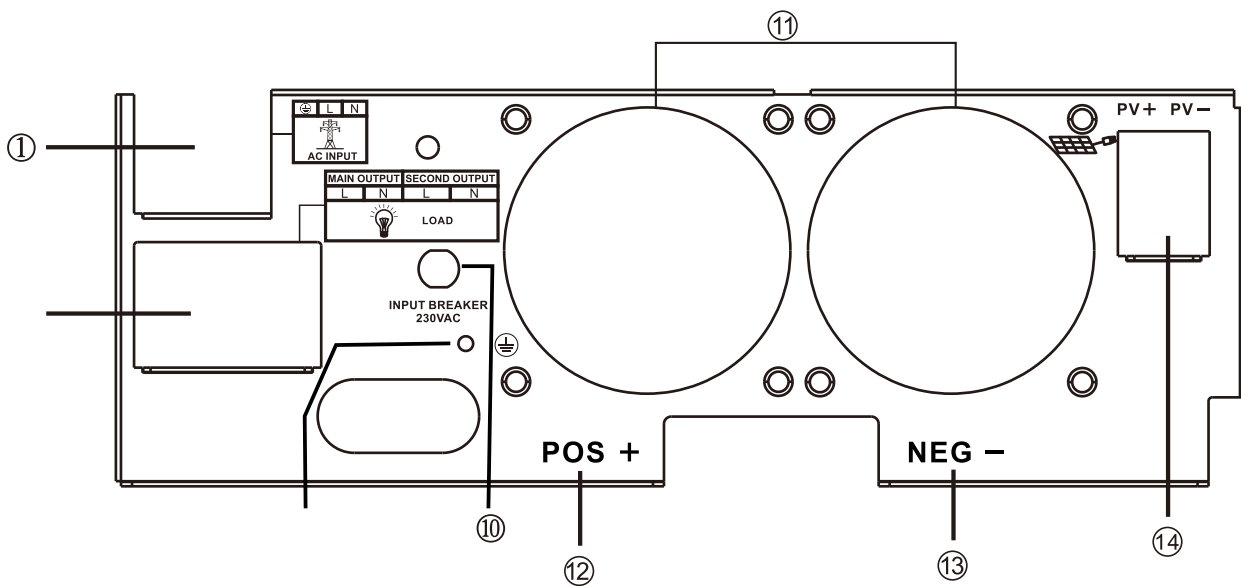

- |                                    |                                |
|------------------------------------|--------------------------------|
| 1..... AC Input                    | 8.....Power ON/ OFF Switch     |
| 2..... AC Output                   | 9.....PV Input                 |
| 3..... Communication Port          | 10...Input Breaker             |
| 4.....BMS/RS485 Communication Port | 11...Fan                       |
| 5..... Dry Contact                 | 12...Battery Terminal Positive |
| 6.....Parallel connection          | 13...Battery Terminal Negative |
| 7.....Battery Input                | 14...Solar Panel Input         |
|                                    | 15...AC Main/Second Output     |
|                                    | 16...Output ground wire        |



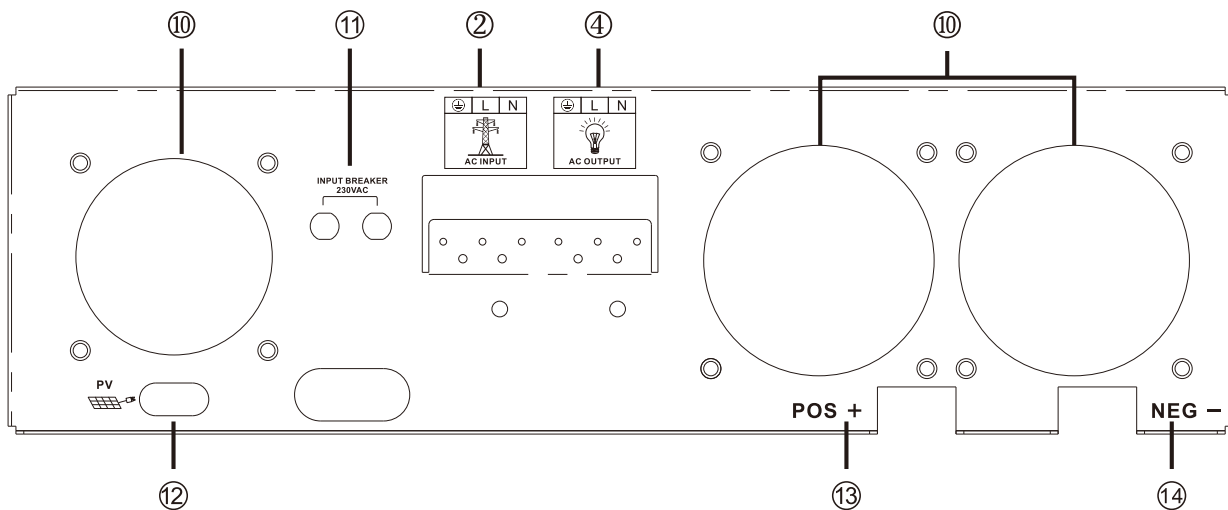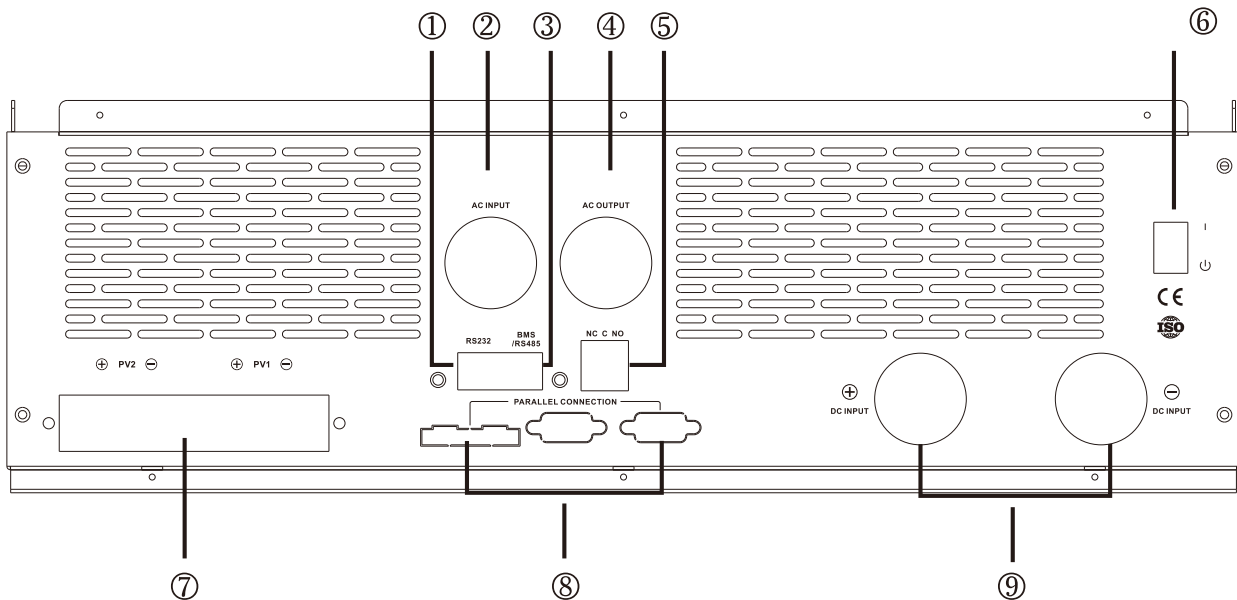

### 8KVA-11KVA

- |                                    |                                 |
|------------------------------------|---------------------------------|
| 1.....RS232 Communication Port     | 8.....Parallel connection       |
| 2.....AC Input                     | 9.....Battery Input             |
| 3.....BMS/RS485 Communication Port | 10....Fan                       |
| 4.....AC Output                    | 11....Input Breaker             |
| 5.....Dry Contact                  | 12....PV Input                  |
| 6.....Power ON/OFF Switch          | 13....Battery Terminal Positive |
| 7.....Solar Panel Input            | 14....Battery Terminal Negative |

## 4 INSTALLATION


### 4.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- ◆ The unit x 1
- ◆ User manual 1

## 4.2 Preparation


Before connecting all please take off bottom cover by removing two screws as shown below.

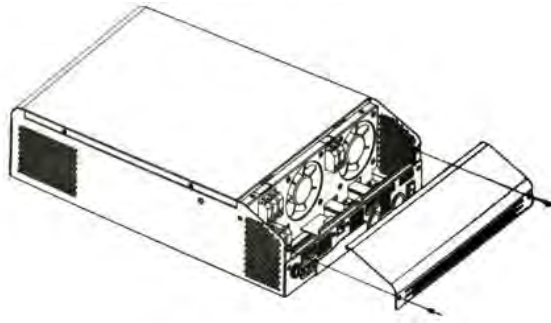

## 4.3 Mounting the Unit

Consider the following points before selecting where to install:

- ※ Do not mount the inverter on flammable construction materials.
- ※ Mount on a solid surface
- ※ Install this inverter at eye level in order to allow the LCD display to be read at all times.
- ※ For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit.
- ※ The ambient temperature should be between and to ensure optimal operation.
- ※ The recommended installation position is to be adhered to the wall vertically.
- ※ Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

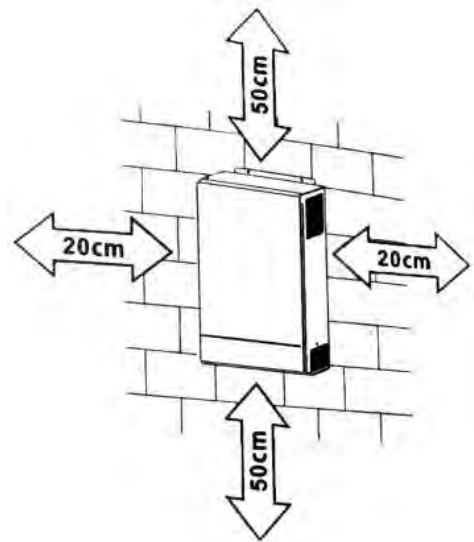

**SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.**

Install the unit by screwing three screws.

- 1,2 Use the M6\*80mm expansion bolts.
- 3 Use M4 or M5.




#### 4.4 Battery Connection

**CAUTION:** For safety operation and regulation compliance, it's requested to install or disconnect device between battery and inverter. Please refer to typical section or breaker size.

**WARNING!** All wiring must be performed by qualified personnel.  
**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Ring terminal:

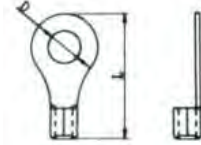


Recommended battery cable and terminal size:


| Model  | Typical Amperage | Battery capacity | Wire Size | Ring Terminal           |            |       | Torque value |
|--------|------------------|------------------|-----------|-------------------------|------------|-------|--------------|
|        |                  |                  |           | Cable(mm <sup>2</sup> ) | Dimensions |       |              |
|        |                  |                  |           |                         | D(mm)      | L(mm) |              |
| 2KVA   | 88A              | 100AH            | 1*6AWG    | 14                      | 6.4        | 33.2  | 2~3 Nm       |
|        |                  |                  | 2*10AWG   | 6                       | 6.4        | 23.8  |              |
| 3KVA   | 132A             | 100AH            | 1*4AWG    | 22                      | 6.4        | 33.2  | 2~3 Nm       |
|        |                  | 200AH            | 2*8AWG    | 9                       | 6.4        | 29.2  |              |
| 3.6KVA | 165A             | 200AH            | 2*4AWG    | 25                      | 8.4        | 33.2  | 5Nm          |
| 5KVA   | 109A             | 200AH            | 1*2AWG    | 38                      | 6.4        | 39.2  | 2~3 Nm       |
|        |                  |                  | 2*6AWG    | 28                      | 6.4        | 33.2  |              |
| 5.5KVA | 121A             | 200AH            | 1*2AWG    | 34                      | 6.4        | 39.2  | 2~3 Nm       |
|        |                  |                  | 2*6AWG    | 14                      | 6.4        | 33.2  |              |
| 6.2KVA | 124A             | 200AH            | 1*2AWG    | 38                      | 8.4        | 39.2  | 5Nm          |
|        |                  |                  | 2*4AWG    | 25                      | 8.4        | 33.2  |              |
| 8KVA   | 183.2A           | 250AH            | 1*2/0AWG  | 67.4                    | 8.4        | 51    | 5Nm          |
| 11KVA  | 228A             | 250AH            | 1*3/0AWG  | 85                      | 8.4        | 54    | 5Nm          |

please follow below steps to implement battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal size.

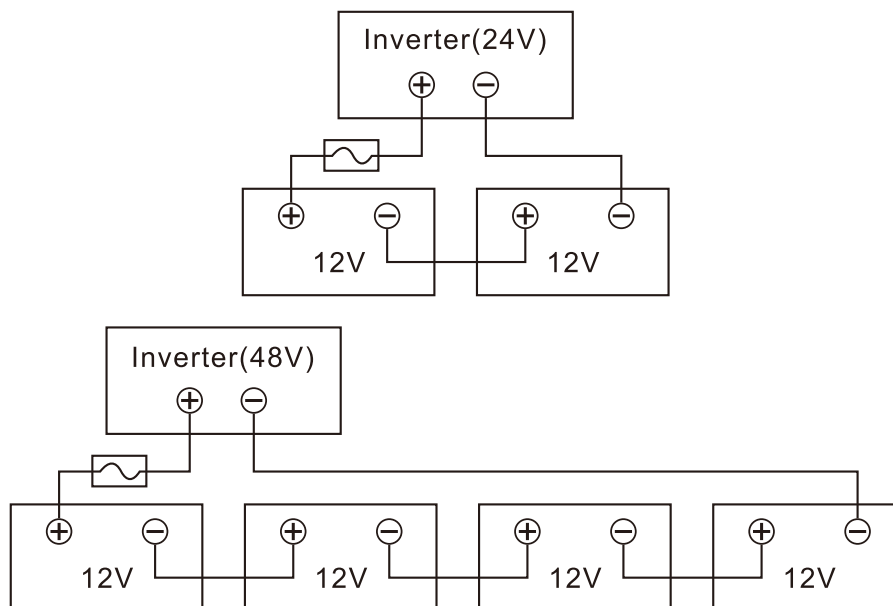

2. Insert the battery wires flatly into battery connectors of inverter and make sure the bolts are tightened with torque of 2 Nm in clockwise direction. Make sure polarity at both the battery and the inverter/charge is correctly connected and conductors are tightly screwed into the battery terminals. Recommended tool: # 2 Pozi Screwdriver

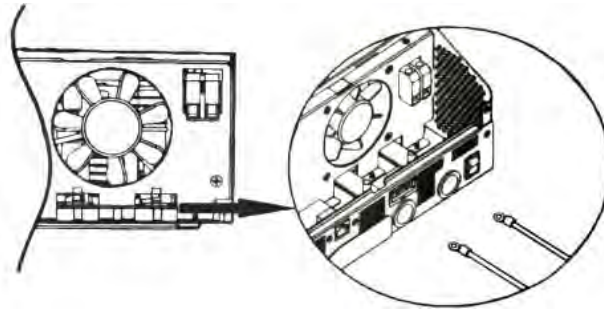

|  |   |
|--|---|
|  | <b>WARNING:</b> Shock Hazard<br>Installation must be performed with care due to high battery voltage in series. |
|--|---|

|  |  |
|--|--|
|  | <b>CAUTION!!</b> Before making the final DC connection or closing DC breaker/disconnector, be sure positive( + ) must be connected to positive( + ) and negative( - ) must be connected to negative ( - ). |
|--|--|

**4.5 AC Input Output Connection**

**CAUTION!!** Before connecting to AC input power source, please Install a separate AC breaker between inverter and AC input power source. This will ensure the Inverter can be disconnected during maintenance and fully protected from over current of AC input. The recommended spec of breaker is 32A for 3 KW and 50A for 5 KW.

**CAUTION!!** There are two terminal blocks with " IN " and " OUT " markings. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

**Suggested cable requirement for AC wires**

| Model  | Gauge | Torque value |
|--------|-------|--------------|
| 2KVA   | 14AWG | 08~1.0Nm     |
| 3KVA   | 12AWG | 1.2~1.6Nm    |
| 3.6KVA | 12AWG | 1.2~1.6Nm    |
| 5KVA   | 10AWG | 1.4~1.6Nm    |
| 5.5KVA | 10AWG | 1.4~1.6Nm    |
| 6.2KVA | 10AWG | 1.4~1.6Nm    |
| 8KVA   | 8AWG  | 1.4~1.6Nm    |
| 11KVA  | 8AWG  | 1.4~1.6Nm    |

Please follow below steps to implement AC input/ output connection


1. Before making AC input/output connection be sure to open DC protector or disconnecter first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N3 mm.

3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor(⊕)first.

⊕→**Ground(yellow-green)**

L→**LINE(brown or black)**

N→**Neutral (blue)**

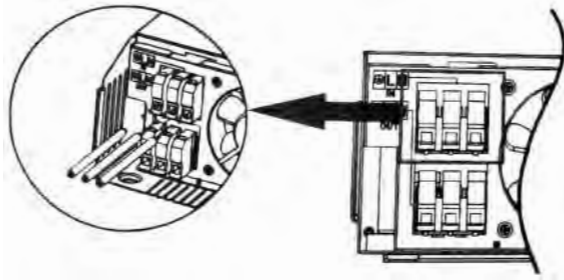

**WARNING:**

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Make sure the wires are securely connected

**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/ charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

**4.6 PV Connection**

**PV Connection(Only apply for the model with solar charger)**

**CAUTION:**Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

| Typical Amperage | Gauge | Torque Value |
|------------------|-------|--------------|
| 30A              | 12AWG | 1.4~1.6Nm    |

**PV module selection:**

When choosing the right PV module, be sure to first consider the following requirements:



The open circuit voltage (Voc) of the PV modules does not exceed the maximum PV array open circuit voltage of the inverter. The maximum supply voltage of the PV modules should be close to the optimal PV access voltage range of the inverter for best performance. If one PV module cannot meet this requirement, it is necessary to connect multiple PV modules in series.

| Model                   | 2024P  | 3024M      | 3524M      | 3024MH      | 3624MH      | 5048MH      | 5548MH      | 6248MH      | 8048MH            | 11048MH           |
|-------------------------|--------|------------|------------|-------------|-------------|-------------|-------------|-------------|-------------------|-------------------|
| PV Charging Mode        | PWM    | MPPT       | MPPT       | MPPT        | MPPT        | MPPT        | MPPT        | MPPT        | MPPT<br>Dual MPPT | MPPT<br>Dual MPPT |
| MAX.PV Input Power      | 1200W  | 1500W      | 1500W      | 4200W       | 4200W       | 5500W       | 5500W       | 6200W       | 2*5500W           | 2*5500W           |
| MPPT Tracking Range     | N/A    | 30~145 Vdc | 30~145 Vdc | 120~500 Vdc | 120~500 Vdc | 120~500 Vdc | 120~500 Vdc | 120~500 Vdc | 90~500 Vdc        | 90~500 Vdc        |
| Best voltage            | 30~32V | 30~115V    | 30~115V    | 300~400V    | 300~400V    | 300~400V    | 300~400V    | 300~400V    | 300~400V          | 300~400V          |
| MAX.PV Input Voltage    | 80Vdc  | 150Vdc     | 145Vdc     | 500Vdc      | 500Vdc      | 500Vdc      | 500Vdc      | 500Vdc      | 500Vdc            | 500Vdc            |
| MAX.PV Charging Current | 50A    | 60A        | 60A        | 100A        | 100A        | 100A        | 100A        | 100A        | 150A              | 150A              |
| MAX.AC Charging Current | 50A    | 60A        | 60A        | 60A         | 80A         | 60A         | 60A         | 80A         | 120A              | 150A              |
| MAX.Charging Current    | 100A   | 120A       | 120A       | 100A        | 120A        | 100A        | 100A        | 120A        | 150A              | 150A              |

### PV Module Wire Connection

Please follow below steps to implement PV module connection:

1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool
3. Fix wire cover to the inverter with supplied screws as shown in below chart.

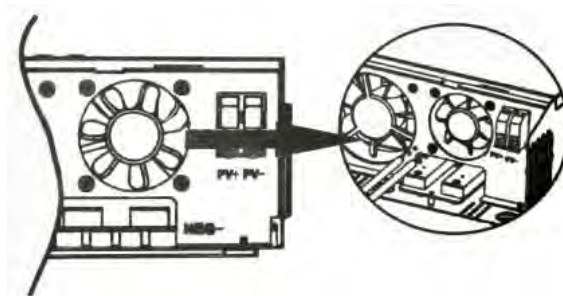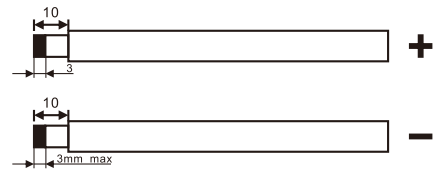

4. Check correct polarity of wire from PV modules and PV input connectors. Then, connect positive pole (+) of connection wire to positive pole (+) of PV input connector. Connect negative pole (-) of connection wire to negative pole (-) of PV input connector. Screw two wires tightly in clockwise direction. Recommended tool: 4mm blade screwdriver.

### 4.7 Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.



## 4.8 Communication Connection

1. Please use supplied communication cable to connect to inverter and PC. Insert bundled CD into a computer and follow on-screen instruction to install the monitoring software. For the detailed software operation, please check user manual of software inside of CD.

2. Wi-Fi cloud communication(option):


please use supplied communication cable to connect to inverter and Wi-Fi module. Download APP and installed from APP store, and Refer to "Wi-Fi Plug Quick Installation Guideline" to set up network and registering. The inverter status would be shown by mobile phone APP or webpage of computer.

3. GPRS cloud communication(option):

please use supplied communication cable to connect to inverter and GPRS module, and then applied external to GPRS module. Download APP and installed from APP store, and Refer to "GPRS RTU Quick Installation Guideline" to set up network and registering. The inverter status would be shown by mobile phone APP or webpage of computer.

## 5 OPERATION

### 5.1 Power ON/OFF

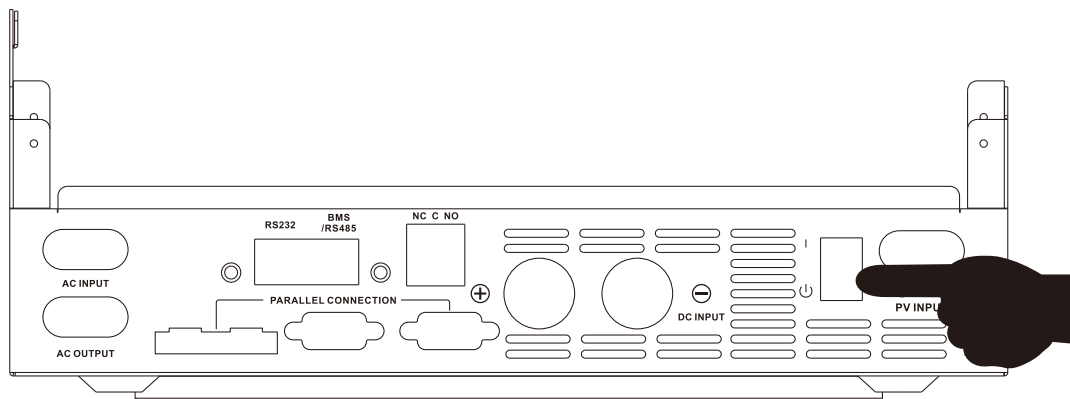

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

#### 5.1.1 Steps to start up

Connect the battery that meets the requirements (battery voltage needs to be beyond 23V) or AC (AC needs to confirm the suitable input range depends on the output mode), then you can start up the inverter.

##### ➤ Mains power on

Connect to normal AC power, press the switch, the system will automatically turn on. If you set AC output power priority, after waiting for a period of time, the panel will display AC mode that represents turn on the machine successfully, then will enter the AC mode.

When the normal mains power is connected and press the power-on button then the system will automatically power on. If it is set as AC output priority, after a period of time, the panel will display the AC mode to indicate that the power-on is complete and enter the AC mode.

##### ➤ Battery boot

Connect to battery, press the power-on button to establish a working power source.


The system will automatically turn on, after waiting for a period of time, the panel will display battery mode that represents turn on the machine successfully, then will enter the battery mode.

#### 5.1.2 Shutdown steps

When the system is in battery mode or AC mode output, press the switch again, then the system will be turned off.

## 5.2 Operation and Display Panel

The operation and display panel, shown in below chart , is on the front panel of the inverter. It includes three indicators , four function keys and a LCD display, indicating the operating status and input/output power information.

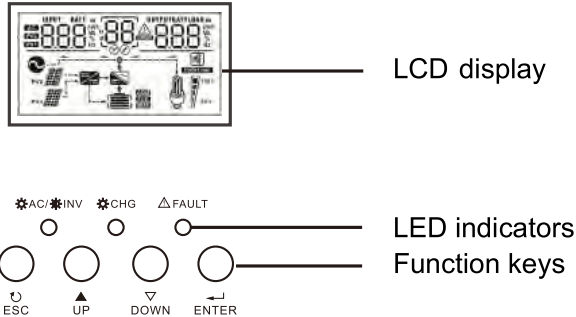

### LED Indicator

| LED Indicator |       | Messages |   |
|---------------|-------|----------|---|
| AC /  INV     | Green | Solid On | Output is powered by utility in Line mode.          |
|               |       | Flashing | Output is powered by battery or PV in battery mode. |
| CHG           | Green | Solid On | Battery is fully charged.                           |
|               |       | Flashing | Battery is charging.                                |
| FAULT         | Red   | Solid On | Fault occurs in the inverter.                       |
|               |       | Flashing | Warning condition occurs in the inverter.           |























### Function Keys

| Function Key | Description  |
|--------------|--|
| ESC          | To exit setting mode   |
| UP           | To go to previous selection                                    |
| DOWN         | To go to next selection  |
| ENTER        | To confirm the selection in setting mode or enter setting mode |

### LCD Display Icons















| Icon  | Function  |   |   |   |
|---|---|---|---|---|
| <b>Input source information</b>   |   |   |   |   |
|    | Indicates the AC input  |   |   |   |
|    | Indicates the 1 <sup>st</sup> PV panel input  |   |   |   |
|    | Indicates the 2 <sup>nd</sup> PV panel input  |   |   |   |
| <b>Left digital display information</b>   |   |   |   |   |
|    | Indicate input voltage, input frequency, battery voltage, V1 voltage, PV2 voltage, charger current  |   |   |   |
| <b>Middle digital display information</b>   |   |   |   |   |
|    | Indicates the setting programs.   |   |   |   |
|    | Indicates the warning and fault codes.<br>Warning: Flashing  with warning code<br>Fault: display  with fault code |   |   |   |
| <b>Right digital display information</b>  |   |   |   |   |
|   | Indicate the output voltage, output frequency, load percent, load VA, load W, PV1 charger power, PV2 charger power, DC discharging current.   |   |   |   |
| <b>Battery information</b>  |   |   |   |   |
|  | Indicates battery level by 0-24%,25-49%,50-74% and 75-100% and charging status.   |   |   |   |
|  | Indicates the battery type: AGM, Flooded or User-defined battery.   |   |   |   |
| <b>Load information</b>   |   |   |   |   |
|  | Indicates overload.   |   |   |   |
|  | Indicates the load level by 0-24%,25-50%,50-74%,and 75-100%.  |   |   |   |
|   | 0%~25%  | 25%~50%   | 50%~75%   | 75%~100%  |
|   |    |  |  |  |
| <b>Mode operation information</b>   |   |   |   |   |
|  | Indicates unit connects to the mains.   |   |   |   |
|  | Indicates unit connects to the 1 <sup>st</sup> PV panel   |   |   |   |
|  | Indicates the solar charger is working  |   |   |   |
|  | Indicates the DC/AC inverter circuit is working.  |   |   |   |
| <b>Mute operation</b>   |   |   |   |   |
|  | Indicates unit alarm is disabled.   |   |   |   |


## Display Setting

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, PV voltage, charging current, battery voltage, output voltage, output frequency, load percentage, load in Watt, load in VA, load in Watt, DO discharging current, main board firmware version and SCC firmware version.

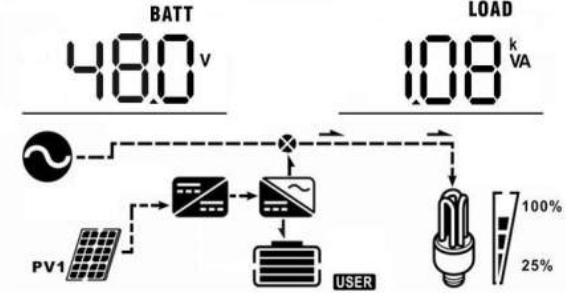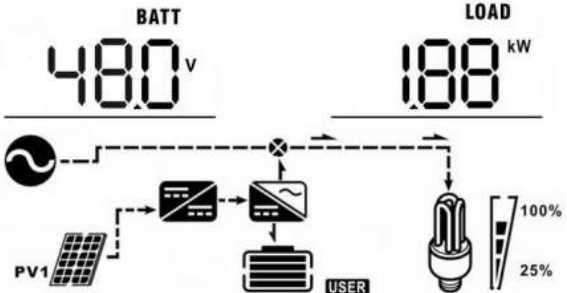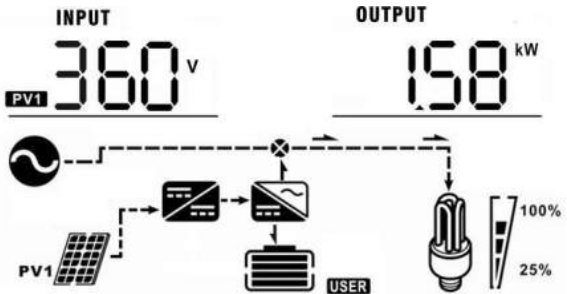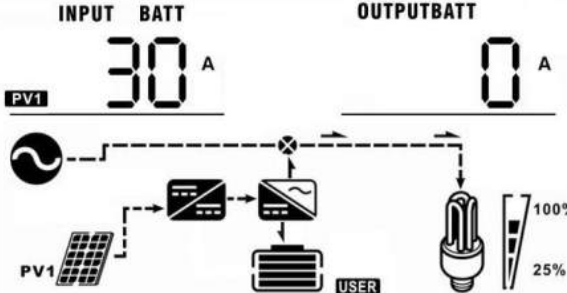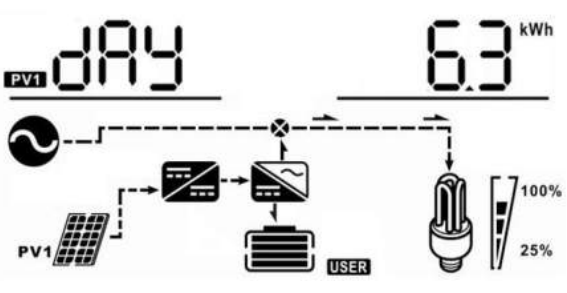
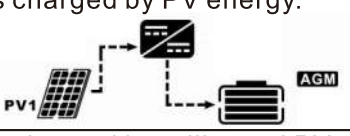
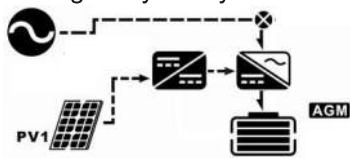
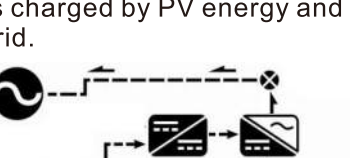


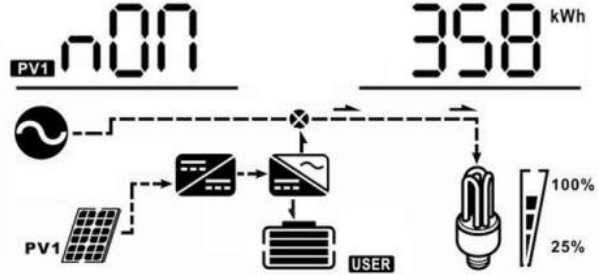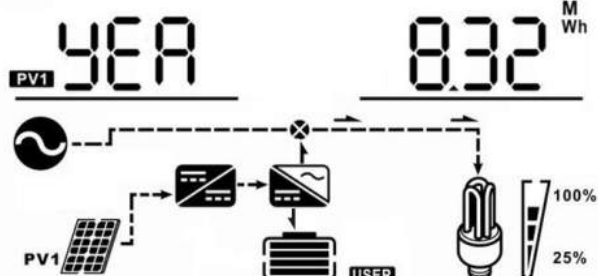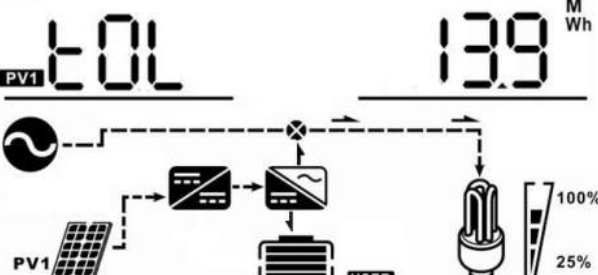
| Select item  | LCD display  |
|--|--|
| Input voltage and output voltage<br>(Default Display Screen) | <p>Input Voltage=230V, output voltage=230V</p>         |
| Input frequency and output frequency                         | <p>Input frequency=50.0Hz, output frequency=50.0Hz</p> |
| Battery voltage and output voltage                           | <p>Battery Voltage=48.0V, output voltage=230V</p>      |
| Battery voltage and load percentage                          | <p>Battery Voltage=48.0V, load percentage 68%</p>      |

|   |  |
|---|--|
| <p>Battery voltage and load in VA</p>             | <p>Battery Voltage=48.0V, load in VA=1.08kVA</p>       |
| <p>Battery voltage and load in Watt</p>           | <p>Battery Voltage=48.0V, load in Watt=1.88kW</p>      |
| <p>PV1 voltage and PV1 charger power</p>          | <p>PV1 Voltage=360V, charging power=1.58kW</p>        |
| <p>Charger current and DC discharging current</p> | <p>Charging current=30A, discharging current=0A</p>  |
| <p>PV energy generated today</p>                  | <p>Today energy = 6.3kWh</p>                         |
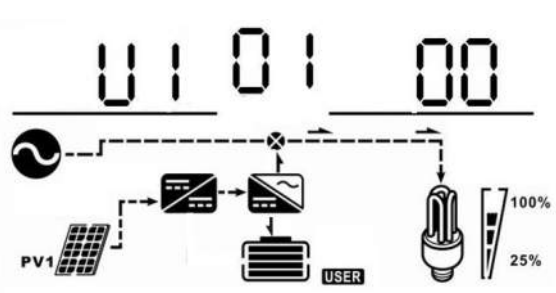
|                                       |   |
|---------------------------------------|---|
| <p>PV energy generated this month</p> | <p>This month energy = 358kWh.</p>  |
| <p>PV energy generated this year</p>  | <p>This year energy = 8.32MWh</p>   |
| <p>PV energy generated totally</p>    | <p>Total energy = 13.9MWh</p>      |
| <p>Real date</p>                      | <p>Real date Nov 28, 2016.</p>    |
| <p>Real time</p>                      | <p>Real time 13: 20.</p>          |

|                             |  |
|-----------------------------|--|
| Main board firmware version | Version 00001.00<br> |
|-----------------------------|--|

### Operating Mode Description

| Operating mode   | Behaviors   | LCD display  |
|--|---|--|
| Standby mode<br>Note:<br>*Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output.<br>*Power swing mode: If enabled, the output of inverter will be off when connected load is pretty low or not detected. | No output power, solar or utility charger available | Battery is charged by utility.<br>                             |
|  |   | Battery is charged by PV energy.<br>                          |
|  |   | Battery is charged by utility and PV energy.<br>             |
|  |   | Battery is charged by PV energy and feed PV energy grid.<br> |
|  |   | No charging.<br>  |
| Line mode  | Output power from utility. Charger available        | Utility charges battery and provides power to load.<br>      |
|  |   | Utility and battery power provide power to load.<br>         |

|              |  |  |
|--------------|--|--|
| Line mode    | Output power from utility. Charger available | <p>PV energy, battery power and utility provide power to load.</p>   |
|              | Output power from utility. Charger available | <p>PV energy and utility charge battery, and utility provides power to load.</p>                               |
|              |  | <p>PV energy charges battery, utility and PV energy provide power to the load.</p>                             |
|              |  | <p>PV energy charges battery, PV energy provides power to the load and feeds remaining energy to the grid.</p> |
|              |  | <p>PV energy charges battery, PV energy provides power to the load and feeds remaining energy to the grid.</p> |
| Battery mode | Output power from battery or PV              | <p>PV energy charges battery, PV energy provides power to the load and feeds remaining energy to the grid.</p> |
|              |  | <p>PV energy and battery energy supply power to the load.</p>  |
|              |  | <p>Battery provides power to the load.</p>   |
| Only PV mode | Output power from PV                         | <p>PV provides power to the load.</p>  |

### 5.3 LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press “UP” or “DOWN” button to select setting programs. And then, press “ENTER” button to confirm the selection or ESC button exit.













#### Setting Programs:

| Program | Description   | Selectable option                  |  |
|---------|---|------------------------------------|--|
| 00      | Exit setting mode   | Escape<br>00 ESC                   |  |
| 01      | Output source priority selection  | 01 SUB                             | Solar energy provides power to the loads as first priority.<br>If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time.   |
|         |   | 01 SUBU                            | Solar energy provides power to the loads as first priority.<br>If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time.<br>Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 20 or solar and battery is not sufficient. |
| 02      | Maximum charging current:<br>To configure total charging current for solar and utility chargers.<br>(Max. charging current = utility charging current + solar charging current) | 60A(default)<br>02 60 <sup>A</sup> | Setting range is from 10A to 100A.<br>Increment of each click is 10A.  |
| 03      | AC input voltage range  | Appliances (default)<br>03 APL     | If selected, acceptable AC input voltage range will be within 90-280VAC.   |
|         |   | UPS<br>03 UPS                      | If selected, acceptable AC input voltage range will be within 170-280VAC.  |
| 05      | Battery type  | AGM (default)<br>05 AGM            | Flooded  |
|         |   | User-Defined<br>05 USE             | If "User-Defined" is selected, battery charge voltage, low DC cut-off voltage and dual cut-off voltage can be set up in program 26,27,29 and 61.   |

|    |   |  |  |
|----|---|--|--|
| 06 | Auto restart when overload occurs   | Restart disable(default)<br>06 Lfd                                 | Restart enable<br>06 LfE   |
| 07 | Auto restart when over temperature occurs   | Restart disable (default)<br>07 tfd                                | Restart enable<br>07 tFE   |
| 08 | ECO function:<br>System will temporarily stop when the load is low in battery mode.   | disable (default)<br>ECO 08 SdS                                    |  |
|    |   | enable<br>ECO 08 SEN   |  |
| 09 | Output frequency  | 50Hz(default)<br>09 50 Hz  | 60Hz<br>09 60 Hz   |
| 10 | Output voltage  | 220V<br>10 220 <sup>v</sup>  | 230V (default)<br>10 230 <sup>v</sup>                                      |
|    |   | 240V<br>10 240 <sup>v</sup>  |  |
| 11 | Maximum utility charging current<br>Note: If setting value in program 02 is smaller than that in program in 11, the inverter will apply charging current from program 02 for utility charger. | 30A(default)<br>11 30A   | Setting range is 2A, then from 10A to 60A. Increment of each click is 10A. |
| 12 | Setting voltage point back to utility source when selecting "SBU priority" in program 01.   | Available options in 3KVA model:                                   |  |
|    |   | 23.0V (default)<br>12 <sup>BATT</sup> 230 <sup>v</sup>             | Setting range is from 22V to 25.5V. Increment of each click is 0.5V.       |
| 13 | Setting voltage point back to battery mode when selecting "SBU priority" in program 01.   | Available options in 5KVA model:                                   |  |
|    |   | 46V (default)<br>12 <sup>BATT</sup> 46 <sup>v</sup>                | Setting range is from 44V to 51V. Increment of each click is 1V.           |
| 13 | Setting voltage point back to battery mode when selecting "SBU priority" in program 01.   | Available options in 3KVA model:                                   |  |
|    |   | Battery fully charged<br>13 <sup>BATT</sup> FUL                    | 27V(default)<br>13 <sup>BATT</sup> 270 <sup>v</sup>                        |
|    |   | Setting range is from 24V to 29V. Increment of each click is 0.5V. |  |




















|    |   |   |   |
|----|---|---|---|
|    |   | Available options in 5KVA model:  |   |
|    |   | Battery fully charged<br>13 <sup>BATT</sup> FUL   | 54V (default)<br>13 <sup>BATT</sup> 54.0 <sup>v</sup>   |
|    |   | Setting range is from 48V to 58V. Increment of each click is 1V.  |   |
| 16 | Charger source priorit:<br>To configure charger source priority | If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:  |   |
|    |   | Utility first<br>16 CUT   | Utility will charge battery as first priority.<br>Solar energy will charge battery only when utility power is not available.  |
|    |   | Solar first<br>16 CSO   | Solar energy will charge battery as first priority.<br>Utility will charge battery only when solar energy is not available.   |
|    |   | Solar and Utility(default)<br>16 SNU  | Solar energy and utility will charge battery at the same time.  |
|    |   | Only Solar<br>16 OSO  | Solar energy will be the only charger source no matter utility is available or not.   |
|    |   | If this inverter/charger is working in Battery mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient. |   |
| 18 | Alarm control   | Alarm on (default)<br>18 BON  | Alarm off<br>18 BOF   |
| 19 | Auto return to default display screen                           | Return to default display screen (default)<br>19 ESP  | If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute. |
|    |   | Stay at latest screen<br>19 FEP   | If selected, the display screen will stay at latest screen user finally switches.   |
| 20 | Backlight control   | Backlight on (default)<br>20 LON  | Backlight off<br>20 LOF   |
| 22 | Beeps while primary source is interrupted                       | Alarm on (default)<br>22 AON  | Alarm off<br>22 AOF   |

|    |  |   |   |
|----|--|---|---|
| 23 | Overload bypass:<br>When enabled, the unit will transfer to line mode if overload occurs in battery mode.  | Bypass disable (default)<br>   | Bypass enable<br>  |
| 25 | Record Fault code  | Record enable (default)<br>  | Record disable<br> |
| 26 | Bulk charging voltage (C.V voltage)  | 3KVA default setting: 28.2V<br>   |   |
|    |  | 5KVA default setting: 56.4V<br>   |   |
|    |  | If self-defined is selected in program 5, this program can be set up. Setting range is from 25.0V to 31.5V for 3KVA model and 48.0V to 61.0V for 5KVA model. Increment of each click is 0.1V.   |   |
| 27 | Floating charging voltage  | 3KVA default setting: 27.0V<br>  |   |
|    |  | 5KVA default setting: 54.0V<br>   |   |
| 28 | Reset factory setting  | default:<br>  |   |
|    |  |   |   |
| 29 | Low DC cut-off voltage:<br><ul style="list-style-type: none"> <li>• If battery power is only power source available inverter will shut down.</li> <li>• If PV energy and battery power are available, inverter will charge battery without AC output.</li> </ul> | If self-defined is selected in program 5, this program can be set up. Setting range is from 21.0V to 24.0V for 3KVA model and 42.0V to 48.0V for 5KVA model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.<br> |   |
|    |  | 5KVA default setting: 42.0V<br>   |   |


|    |                                    |   |  |
|----|------------------------------------|---|--|
|    |                                    | If self-defined is selected in program 5, this program can be set up. Setting range is from 21.0V to 24.0V for 3KVA model and 42.0V to 48.0V for 5KVA model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.   |  |
| 30 | Battery equalization               | Battery equalization<br>30 EEN  | Battery equalization disable (default)<br>30 EdS                       |
|    |                                    | If "Flooded" or "User Defined" is selected in program 05, this program can be set up.   |  |
| 31 | Battery equalization voltage       | 3KVA default setting: 29.2V<br>EV 31 <sup>BATT</sup> 29.2 <sub>v</sub>  |  |
|    |                                    | 5KVA default setting: 58.4V<br>EV 31 <sup>BATT</sup> 58.4 <sub>v</sub>  |  |
|    |                                    | Setting range is from 25.0V to 31.5V for 3KVA mode and 48.0V to 61.0 V for 5KVA model. Increment of each click is 0.1V.   |  |
| 33 | Battery equalized time             | 60min (default)<br>33 60  | Setting range is from 5min to 900min. Increment of each click is 5min. |
| 34 | Battery equalized timeout          | 120min (default)<br>34 120  | Setting range is from 5min to 900min. Increment of each click is 5min. |
| 35 | Equalization interval              | 30days (default)<br>35 30d  | Setting range is from 0 to 90 days. Increment of each click is 1 day.  |
| 36 | Equalization activated immediately | Enable<br>36 AEN  | Disable (default)<br>36 AdS  |
|    |                                    | If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will show " E9 ", If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 35 setting. At this time, " E9 " will not be shown in LCD main page. |  |

|    |   |  |   |
|----|---|--|---|
| 37 | BMS Function Switch                     | off(default)<br>bns 37 OFF             | Whether to enable the BMS communication function  |
|    |   | bns 37 ON                              |   |
| 38 | Bat Soc Under Lock                      | bSU 38 BATT 10%                        | BMS low voltage SOC value, if the BMS SOC value is lower than the set value, the inverter will shut down to protect the battery.  |
| 39 | Bat Soc Turn To Ac                      | StC 39 BATT 20%                        | When the working mode of the inverter is set to the battery priority mode, the inverter will be forced to enter the mains charging when the SOC of the BMS is lower than the set value. |
| 40 | Bat Soc Turn To Dc                      | Stb 40 BATT 95%                        | When the working mode of the inverter is set to the battery priority mode, the inverter resumes the DC working mode when the SOC of the BMS is higher than the set value.               |
| 41 | Bat Restart Soc                         | bSt 41 BATT 50%                        | When the inverter is turned on, the SOC must be higher than the set value to work normally.   |
| 43 | Solar supply priority                   | 43 bLU                                 | Solar energy provides power to charge battery as first priority.  |
|    |   | 43 lBU                                 | Solar energy provides power to the loads as first priority.   |
| 44 | Solar energy feed to grid configuration | 44 Gfd                                 | Solar energy feed to grid disable.  |
|    |   | 44 GfE                                 | Solar energy feed to grid disable.  |
| 45 | Reset PV energy storage                 | Notre set (Default)<br>45 nrt          | Reset<br>45 rst   |
| 46 | Start charging time for AC charger      | 00:00(Default)<br>AC 5tA 46 BATT 000 h | The setting range of start charging time for AC charger is from 00:00 to 23:00, increment of each click is 1 hour.  |

|    |                                    |  |   |
|----|------------------------------------|--|---|
| 47 | Stop charging time for AC charger  | 00:00(Default)<br>  | The setting range of scheduled Time for AC output on is from 00:00 to 23:00, increment of each click is 1 hour.                       |
| 48 | Scheduled time for AC output on    | 00:00(Default)<br>  | The setting range of scheduled Time for AC output off is from 00:00 to 23:00, increment of each click is 1 hour.                      |
| 49 | Scheduled time for AC output off   | 00:00(Default)<br>  | The setting range of scheduled Time for AC output off is from 00:00 to 23:00, increment of each click is 1 hour.                      |
| 50 | Set country customized regulations | India(Default)<br>  | If selected, acceptable feed-in grid voltage range will be 195.5~253VAC. Acceptable feed-in grid frequency range will be 49~51Hz.     |
|    |                                    | Germany<br>       | If selected, acceptable feed-in grid voltage range will be 184~264.5VAC. Acceptable feed-in grid frequency range will be 47.5~51.5Hz. |
|    |                                    | South America<br> | If selected, acceptable feed-in grid voltage range will be 184~264.5VAC. Acceptable feed-in grid frequency range will be 57~62Hz.     |
| 51 | Time setting-Minute                |                   | For minute setting, the range is from 00 to 59.   |
| 52 | Time setting-Hour                  |                   | For hour setting, the range is from 00 to 23.   |
| 53 | Time setting-Day                   |                   | For day setting, the range is from 00 to 31.  |
| 54 | Time setting-Month                 |                   | For month setting, the range is from 1 to 12  |

|    |  |  |   |
|----|--|--|---|
| 55 | Time setting-Year                              | <br>For year setting, the range is from 16 to 99. |   |
| 56 | GRID-tie current                               | <sup>10A</sup><br>                                | Increment of each click is 2A.  |
| 60 | Dual output                                    | Disable(default)<br>                              | Use<br> |
| 61 | Enter the dual output functional voltage point | Default setting:44.0V<br>                        |   |
|    |  | Default setting:22.0V<br>                        |   |
|    |  | If battery voltage lower than inverter setting, second output will be cutted of, Increment of each click is 0.1V.                  |   |
| 62 | Enter the dual output functional SOC point     |   | If BMS capacity lower than SOC setting, second output will be cutted of                   |

When the BMS/485 communication interface is externally connected, as shown in the following figure:

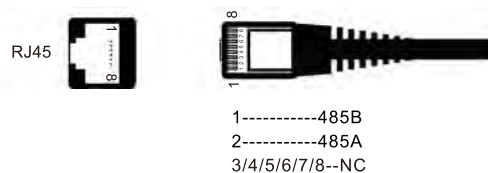

#### 5.4 Battery Equalization Description

Equalization function is added into charge controller, It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.


#### ※ How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 30 first. Then, you may apply this function in device by either one of following methods:

- 1.Setting equalization interval in program 35.
- 2.Active equalization immediately in program 36.


※ **When to Equalize**

In stage, when the setting equalization interval( battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

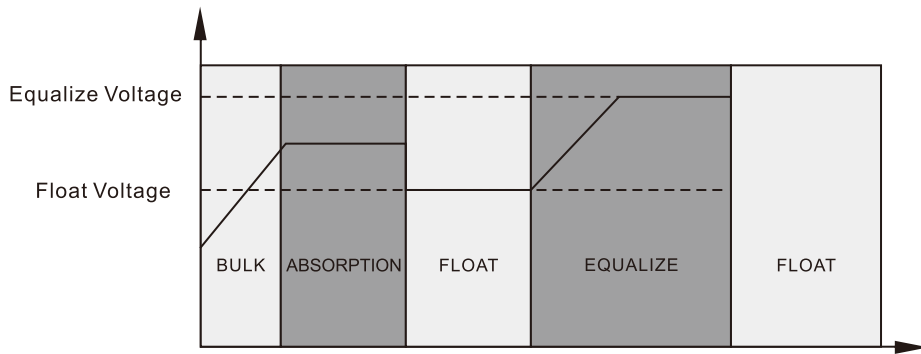


※ **Equalize charging time and timeout**

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

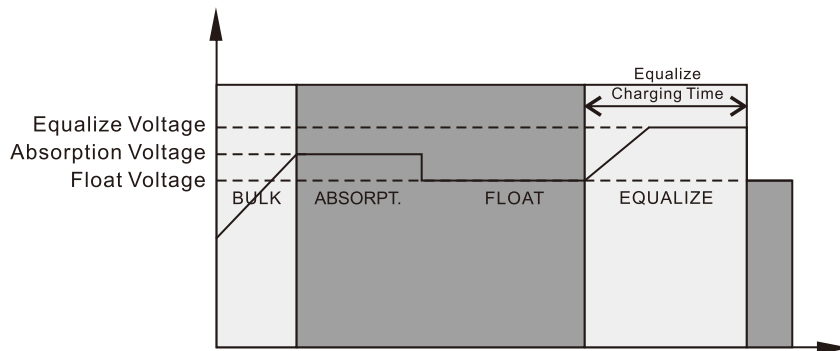

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

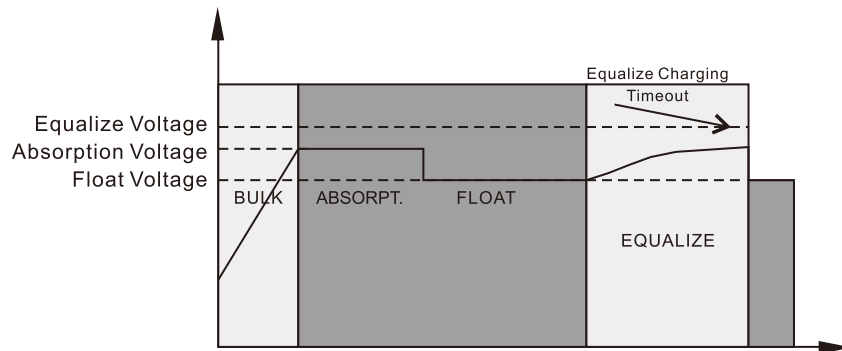

















## 5.5 Fansion and alarm description

### 5.5.1 Faults Descriptions

➤ **Fault:** The inverter enters the fault mode, the red LED light is always on and the LCD displays the fault code.

#### Fault Reference Code

| Fault Code | Fault Event  | Icon on   |
|------------|--|---|
| 01         | Fan is locked when inverter is off.  |    |
| 02         | Over temperature or NTC is not connected well.   |    |
| 03         | Battery voltage is too high.   |    |
| 04         | Battery voltage is too low.  |    |
| 05         | Output short circuited or over temperature is detected by internal converter components. |    |
| 06         | Output voltage is too high.  |    |
| 07         | Over load time out.  |    |
| 08         | Bus voltage is too high  |    |
| 09         | Bus soft start failed  |  |
| 51         | Over currents or surge   |  |
| 52         | Bus voltage is too low   |  |
| 53         | Inverter soft start failed   |  |
| 55         | Over DC voltage in AC output   |  |
| 57         | Current sensor failed  |  |
| 58         | Output voltage is too low  |  |
| 59         | PV voltage is over limitation  |  |



### 5.5.2 Warning Descriptions

➤ **Alarm:** The red LED flashes, and the LCD displays an alarm code, the inverter does not enter the failure mode

#### Warning Indicator

| Warning Code | Warning Event                                 | Audible Alarm                 | Icon flashing |
|--------------|---|-------------------------------|---------------|
| 01           | Fan is locked when inverter is on.            | Beep three times every second |               |
| 02           | Over temperature                              | None                          |               |
| 03           | Battery is over-charged                       | Beep once every second        |               |
| 04           | Low battery                                   | Beep once every second        |               |
| 07           | Overload                                      | Beep once every 0.5 second    |               |
| 10           | Output power derating                         | Beep twice every 3 seconds    |               |
| 15           | PV energy is low.                             | Beep twice every 3 seconds    |               |
| 16           | High AC input (>280VAC) during BUS soft start | None                          |               |
| E9           | Battery equalization                          | None                          |               |
| bP           | Battery is not connected                      | None                          |               |

### 5.5.3 Code Reference

Related information code will be displayed on LCD screen. Please check inverter LCD screen for the operation.

| Code | Description   |
|------|---|
| 60   | If battery status is not allowed to charge and discharge after the communication between the inverter and battery is successful, it will show code 60 to stop charging and discharging battery.   |
| 61   | Communication lost <ul style="list-style-type: none"> <li>After battery is connected, communication signal is not detected for 3 minutes, buzzer will beep. After 10 minutes, inverter will stop charging and discharging to lithium battery.</li> <li>Communication lost occurs after the inverter and battery is connected successfully, buzzer beeps immediately.</li> </ul> |
| 69   | If battery status is not allowed to charge after the communication between the inverter and battery is successful, it will show code 69 to stop charging battery.   |
| 70   | If battery status must to charge after the communication between the inverter and battery is successful, it will show code 70 to charge battery.  |
| 71   | If battery status is not allowed to discharge after the communication between the inverter and battery is successful, it will show code 71 to stop discharge battery.   |

## 6. Trouble removal

| Problem   | LCD/LED/Buzzer  | Explanation/Possible cause   | What to do  |
|---|---|--|---|
| Unit shuts down automatically during startup process.                         | LCD/LEDs and buzzer will be active for 3 seconds and then complete off. | The battery voltage is too low (<1.91V/Cell)   | 1. Re-charge battery.<br>2. Replace battery.  |
| No response after power on.   | No indication   | 1. The battery voltage is far too low.(<1.4V/Cell)<br>2. Internal fuse tripped.  | 1.Contact repair center for replacing the fuse.<br>2. Re-charge battery.<br>3. Replace battery.   |
| Mains exist but the unit works in battery mode.                               | Input voltage is displayed as 0 on the LCD and green LED is flashing.   | Input protector is tripped   | Check if AC breaker is tripped and AC wiring is connected well.   |
|   | Green LED is flashing   | Insufficient quality of AC power. (Shore or Generator)   | 1. Check if AC wires are too thin and/or too long.<br>2. Check if generator (if applied)is working well or if input voltage range setting is correct.(UP-->sppliance) |
|   | Green LED is flashing.  | Set "Solar First" as the priority of output source.  | Change output source priority to Utility first.   |
| When the unit is turned on, internal relay is switched on and off repeatedly. | LCD display and LEDs are flashing                                       | Battery is disconnected.   | Check if battery wires are connected well.  |
| Buzzer beeps continuously and red LED is on.                                  | Fault code 07   | Overload error. The inverter is overload 105% and time is up.  | Reduce the connected load by switching off some equipment.  |
|   |   | If PV input voltage is higher than specification, the output power will be derated.At this time, if connected loads is higher than derated output power, it will cause overload. | Reduce the number of PV modules in series or the connected load.  |
|   | Fault code 05   | Output short circuited.  | Check if wiring is connected well and remove abnormal load.   |
|   |   | Temperature internal converter component is over 120°C.  | Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.   |
|   | Fault code 02   | Internal temperature of inverter component is over 100°C   |   |
|   | Fault code 03   | Battery is over-charged  | Return to repair center.  |
|   |   | The battery voltage is too high.   | Check if spec and quantity of batteries are meet requirements.  |
|   | Fault code 01   | Fan fault  | Replace the fan.  |
|   | Fault code 06/58  | Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)  | 1. Reduce the connected load.<br>2. Return to repair center   |
|   | Fault code 08/09/53/57  | Internal components failed.  | Return to repair center.  |
|   | Fault code 51   | Over current or surge.   | Restart the unit, if the error happens again, please return to repair center.   |
|   | Fault code 52   | Bus voltage is too low.  |   |
|   | Fault code 55   | Output voltage is unbalanced.  |   |
| Fault code 59   | PV input voltage is beyond the specification.                           | Reduce the number of PV modules in series.   |   |

## 7. Technical datasheet

| Model                          |                                       | 2024P  | 3024M      | 3524M      | 3024MH      | 3624MH      | 5048MH        | 5548MH      | 6248MH      | 8048MH            | 11048MH           |
|--------------------------------|---------------------------------------|--|------------|------------|-------------|-------------|---------------|-------------|-------------|-------------------|-------------------|
| Input                          | Input Sources                         | L+N+PE   |            |            |             |             |               |             |             |                   |                   |
|                                | Rated Input Voltage                   | 220/230/240VAC   |            |            |             |             |               |             |             |                   |                   |
|                                | Voltage Range                         | 90-280VAC±3V(APL Mode)170-280VAC±3V(UPS Mode)                              |            |            |             |             |               |             |             |                   |                   |
|                                | Frequency                             | 50Hz/60Hz(Auto Adaptive)   |            |            |             |             |               |             |             |                   |                   |
| Output                         | Rated Capacity                        | 2000W  | 3000W      | 3500W      | 3000W       | 3600W       | 5000W         | 5500W       | 6200W       | 8000W             | 11000W            |
|                                | Output Voltage                        | 220/230/240VAC±5%  |            |            |             |             |               |             |             |                   |                   |
|                                | Output Frequency                      | 50/60Hz±0.1%   |            |            |             |             |               |             |             |                   |                   |
|                                | Waveform                              | Pure Sine Wave   |            |            |             |             |               |             |             |                   |                   |
|                                | Transfer Time (adjustable)            | Computers(UPS Mode)10ms, Appliance(APL Mode )20ms                          |            |            |             |             |               |             |             |                   |                   |
|                                | Peak Power                            | 4000VA   | 6000VA     | 7000VA     | 6000VA      | 7200VA      | 10000VA       | 11000VA     | 12400W      | 16000W            | 22000W            |
|                                | Over Load Ability                     | Battery Mode:<br>21s@105%-150%Load<br>11s@150%-200%Load<br>400ms@>200%Load |            |            |             |             |               |             |             |                   |                   |
| Peak Efficiency (battery Mode) | >93%                                  | >94%   | >94%       | >94%       | >94%        | >98%        | >98%          | >98%        | >98%        | >98%              |                   |
| Battery                        | Battery Voltage                       | 24Vdc  | 24Vdc      | 24Vdc      | 24Vdc       | 24Vdc       | 48Vdc         | 48Vdc       | 48Vdc       | 48Vdc             | 48Vdc             |
|                                | Constant Charging Voltage(Adjustable) | 28.2Vdc  | 28.2Vdc    | 28.2Vdc    | 28.2Vdc     | 28.2Vdc     | 56.4Vdc       | 56.4Vdc     | 56.4Vdc     | 56.4Vdc           | 56.4Vdc           |
|                                | Floate Charging Voltage(Adjustable)   | 27Vdc  | 27Vdc      | 27Vdc      | 27Vdc       | 27Vdc       | 54Vdc         | 54Vdc       | 54Vdc       | 54Vdc             | 54Vdc             |
| Chargers                       | PV Charging Mode                      | PWM  | MPPT       | MPPT       | MPPT        | MPPT        | MPPT          | MPPT        | MPPT        | MPPT<br>Dual MPPT | MPPT<br>Dual MPPT |
|                                | MAX.PV Input Power                    | 1200W  | 1500W      | 1500W      | 4200W       | 4200W       | 5500W         | 5500W       | 6200W       | 2*5500W           | 2*5500W           |
|                                | MPPT Tracking Range                   | N/A  | 30~145 Vdc | 30~145 Vdc | 120~500 Vdc | 120~500 Vdc | 120~500 Vdc   | 120~500 Vdc | 120~500 Vdc | 90~500 Vdc        | 90~500 Vdc        |
|                                | Best voltage                          | 30~32V   | 30~115V    | 30~115V    | 300~400V    | 300~400V    | 300~400V      | 300~400V    | 300~400V    | 300~400V          | 300~400V          |
|                                | MAX.PV Input Voltage                  | 80Vdc  | 150Vdc     | 145Vdc     | 500Vdc      | 500Vdc      | 500Vdc        | 500Vdc      | 500Vdc      | 500Vdc            | 500Vdc            |
|                                | MAX.PV Charging Current               | 50A  | 60A        | 60A        | 100A        | 100A        | 100A          | 100A        | 100A        | 150A              | 150A              |
|                                | MAX.AC Charging Current               | 50A  | 60A        | 60A        | 60A         | 80A         | 60A           | 60A         | 80A         | 120A              | 150A              |
| MAX.Charging Current           | 100A                                  | 120A   | 120A       | 100A       | 120A        | 100A        | 100A          | 120A        | 150A        | 150A              |                   |
| Display                        | LCD Display                           | Display Running Mode/Loads/Input/Output etc.                               |            |            |             |             |               |             |             |                   |                   |
| Interface                      | RS232                                 | Baud Rate2400  |            |            |             |             |               |             |             |                   |                   |
|                                | Communication Port                    | Lithium Battery BMS Communication Card WifiCard, Dry Contact               |            |            |             |             |               |             |             |                   |                   |
|                                | Parallel Connect Interface            | Without Parallel Connect   |            |            |             |             | With Parallel |             |             |                   |                   |
| Environments                   | Operating Temperature                 | -10~50°C   |            |            |             |             |               |             |             |                   |                   |
|                                | Humidity                              | 20%~95%(Non-condensing)  |            |            |             |             |               |             |             |                   |                   |
|                                | Storage Temperature                   | -15~60°C   |            |            |             |             |               |             |             |                   |                   |
|                                | Altitude                              | Altitude Not Over 1000m,Derating over 1000m,Max 4000m, Refer to IEC62040   |            |            |             |             |               |             |             |                   |                   |
|                                | Noise                                 | ≤50db  |            |            |             |             |               |             |             |                   |                   |

# Appendix I: Parallel function

## 1. Introduction


This inverter can be used in parallel with two different operation modes.

1. Parallel operation in single phase with up to 9 units. The supported maximum output power for 3KW is 27KW/27KVA and for 5KW is 45KW/45KVA.
2. Maximum nine units work together to support three-phase equipment. Seven units support one phase maximum. For 3KW, the supported maximum output power is 27KW/27KVA and one phase can be up to 21KW/21KVA. For 5KW, the supported maximum output power is 45KW/45KVA and one phase can be up to 35KW/35KVA.

**NOTE:** If this unit is bundled with share current cable and parallel cable, this inverter is default supported parallel operation. You may skip section 3. If not, please purchase parallel kit and install this unit by following instruction from professional technical personnel in local dealer.

## 2. Package Contents

In parallel kit, you will find the following items in the package:

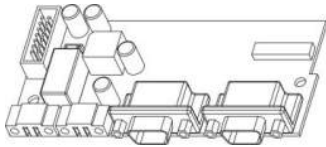

Parallel board




Parallel communication I cable




Current sharing cable

## 3. Parallel board installation


**Step 1:** Remove wire cover by unscrewing all screws.

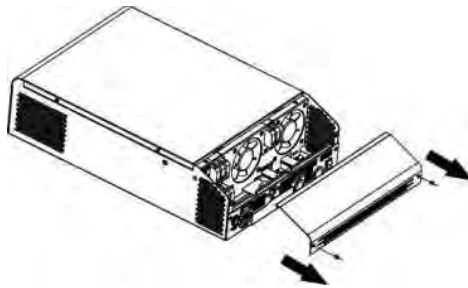


**Step 2:** Remove communication board by unscrewing two screws as below chart

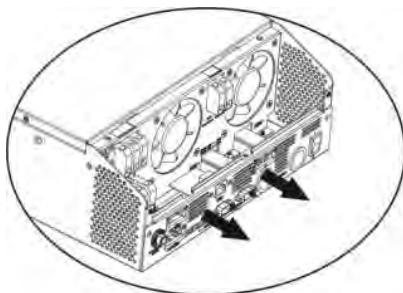


**Step 3:** Remove two screws as below chart and remove 2-pin and 14-pin cables. Take out the board under the communication board.

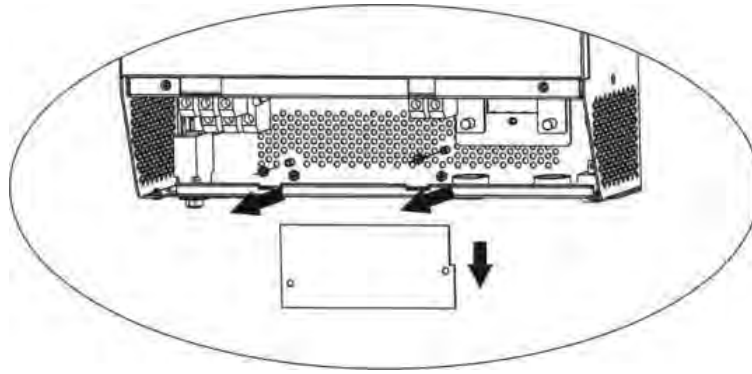

**Step 4:** Remove two screws as below chart to take out cover of parallel communication.

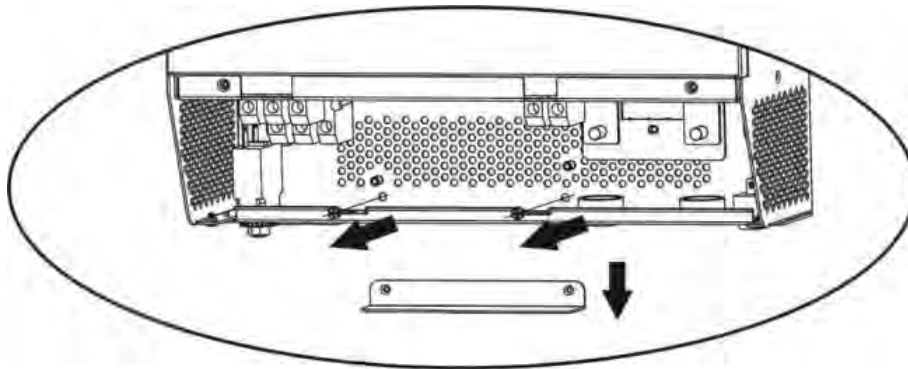



**Step 5:** Install new parallel board with 2 screws tightly.

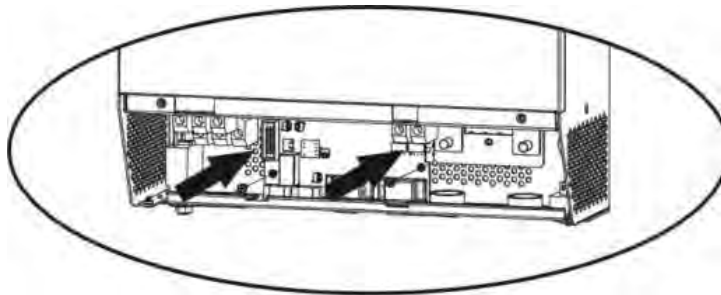


**Step 6:** Re-connect 2-pin and 14-pin to original position.

**Parallel board**

**Communication board**

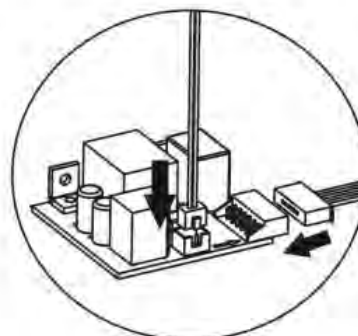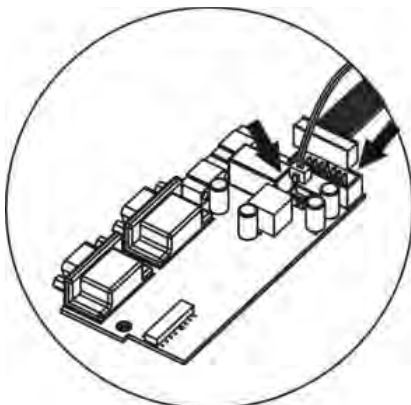


**Step7:** Put communication board back to the unit.

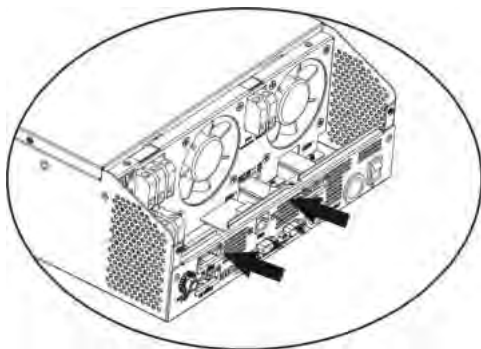

**Step8:** Put wire cover back to the unit. Now the inverter is providing parallel operation function.

**4. Mounting the Unit**

When installing multiple units, please follow below chart.

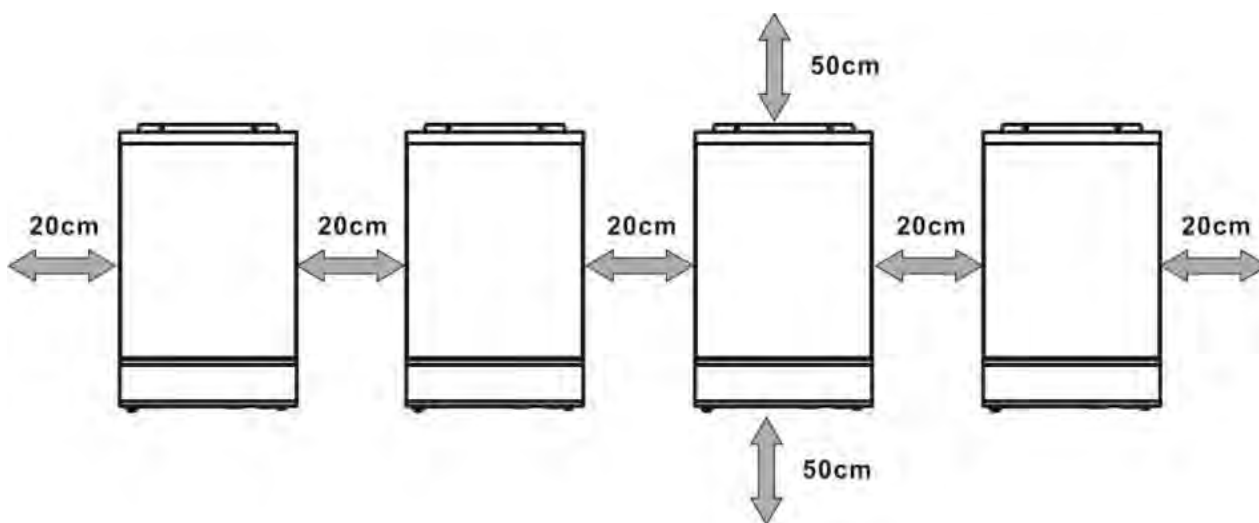

**NOTE:** For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx.50 cm above and below the unit, Be sure to install each unit in the same level.

**5. Wiring Connection**


**NOTICE:** It's requested to connect to battery for parallel operation.

The cable size of each inverter is shown as below:

**Recommended battery cable and terminal size for each inverter:**

| Model | Wire Size | Ring Terminal         |            |        | Torque value |
|-------|-----------|-----------------------|------------|--------|--------------|
|       |           | Cable mm <sup>2</sup> | Dimensions |        |              |
|       |           |                       | D (mm)     | L (mm) |              |
| 3KW   | 1*4AWG    | 22                    | 6.4        | 33.2   | 2~3Nm        |
| 3.6KW | 2*4AWG    | 25                    | 8.4        | 33.2   | 5Nm          |
| 5KW   | 1*2AWG    | 38                    | 6.4        | 33.2   | 2~3Nm        |
| 5.5KW | 1*2AWG    | 38                    | 6.4        | 39.2   | 2~3Nm        |
| 6.2KW | 1*2AWG    | 38                    | 8.4        | 39.2   | 2~3Nm        |
| 8KW   | 1*2/0AWG  | 67.4                  | 8.4        | 51     | 5Nm          |
| 11KW  | 1*3/0AWG  | 85                    | 8.4        | 54     | 5Nm          |

**Ring terminal:**

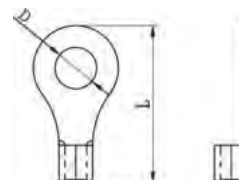

**WARNING:** Be sure the length of all battery cables is the same. Otherwise, there will be voltage difference between inverter and battery to cause parallel inverters not working.

**Recommended AC input and output cable size for each inverter:**

| Model | AWG no. | Torque    |
|-------|---------|-----------|
| 3KW   | 12AWG   | 1.2~1.6Nm |
| 3.6KW | 12AWG   | 1.2~1.6Nm |
| 5KW   | 10AWG   | 1.2~1.6Nm |
| 5.5KW | 10AWG   | 1.2~1.6Nm |
| 6.2KW | 10AWG   | 1.2~1.6Nm |
| 8KW   | 8AWG    | 1.4~1.6Nm |
| 11KW  | 8AWG    | 1.4~1.6Nm |

You need to connect the cables of each inverter together. Take the battery cables for example: You need to use a connector or bus-bar as a joint to connect the battery cables together, and then connect to the battery terminal. The cable size used from joint to battery should be X times cable size in the tables above. indicates the number of inverters connected in parallel.

Regarding AC input and output, please also follow the same principle.

**WARNING!!** Make sure all output N wires of each inverter must be connected all the time. Otherwise, it will cause inverter fault in error code #72.

**CAUTION!!** Please install the breaker at the battery and AC input side. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of battery or AC input. The recommended mounted location of the breakers is shown in the figures in 5- 1 and 5-2.

**Recommended breaker specification of battery for each inverter:**

| Model | 1 unit*    | Model | 1 unit*    |
|-------|------------|-------|------------|
| 3KW   | 150A/70VDC | 6.2KW | 150A/70VDC |
| 3.6KW | 200A/70VDC | 8KW   | 300A/70VDC |
| 5KW   | 150A/70VDC | 11KW  | 300A/70VDC |
| 5.5KW | 150A/70VDC |       |            |

\*If you want to use only one breaker at the battery side for the whole system, the rating of the breaker should be X times current of 1 unit." X " indicates the number of inverters connected in parallel.

**Recommended breaker specification of AC input with single phase:**

| Model | 2 units         | 3 units         | 4 units         | 5 units         | 6 units         | 7 units         | 8 units         | 9 units         |
|-------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| 3KW   | 80A/<br>230VAC  | 120A/<br>230VAC | 160A/<br>230VAC | 200A/<br>230VAC | 240A/<br>230VAC | 280A/<br>230VAC | 320A/<br>230VAC | 360A/<br>230VAC |
| 3.6KW | 80A/<br>230VAC  | 120A/<br>230VAC | 160A/<br>230VAC | 200A/<br>230VAC | 240A/<br>230VAC | 280A/<br>230VAC | 320A/<br>230VAC | 360A/<br>230VAC |
| 5KW   | 80A/<br>230VAC  | 120A/<br>230VAC | 160A/<br>230VAC | 200A/<br>230VAC | 240A/<br>230VAC | 280A/<br>230VAC | 320A/<br>230VAC | 360A/<br>230VAC |
| 5.5KW | 80A/<br>230VAC  | 120A/<br>230VAC | 160A/<br>230VAC | 200A/<br>230VAC | 240A/<br>230VAC | 280A/<br>230VAC | 320A/<br>230VAC | 360A/<br>230VAC |
| 6.2KW | 80A/<br>230VAC  | 120A/<br>230VAC | 160A/<br>230VAC | 200A/<br>230VAC | 240A/<br>230VAC | 280A/<br>230VAC | 320A/<br>230VAC | 360A/<br>230VAC |
| 8KW   | 120A/<br>230VAC | 180A/<br>230VAC | 240A/<br>230VAC | 300A/<br>230VAC | 360A/<br>230VAC | /               | /               | /               |
| 11KW  | 120A/<br>230VAC | 180A/<br>230VAC | 240A/<br>230VAC | 300A/<br>230VAC | 360A/<br>230VAC | /               | /               | /               |

**Note1:** Also, you can use 40A breaker for 2KW and 50A for 3KW/5KW for only 1 unit and install one breaker at its AC input in each inverter.

**Note2:** Regarding three-phase system, you can use 4-pole breaker directly and the rating of the breaker should be compatible with the phase current limitation from the phase with maximum units

### Recommended battery capacity


| Inverter parallel numbers  | 2     | 3     | 4      | 5      | 6      | 7      | 8      | 9      |
|----------------------------|-------|-------|--------|--------|--------|--------|--------|--------|
| Battery Capacity for 3KW   | 400AH | 600AH | 800AH  | 1000AH | 1200AH | 1400AH | 1600AH | 1800AH |
| Battery Capacity for 3.6KW | 400AH | 600AH | 800AH  | 1000AH | 1200AH | 1400AH | 1600AH | 1800AH |
| Battery Capacity for 5KW   | 400AH | 600AH | 800AH  | 1000AH | 1200AH | 1400AH | 1600AH | 1800AH |
| Battery Capacity for 5.5KW | 400AH | 600AH | 800AH  | 1000AH | 1200AH | 1400AH | 1600AH | 1800AH |
| Battery Capacity for 6.2KW | 400AH | 600AH | 800AH  | 1000AH | 1200AH | 1400AH | 1600AH | 1800AH |
| Battery Capacity for 8KW   | 400AH | 600AH | 800AH  | 1000AH | 1200AH | /      | /      | /      |
| Battery Capacity for 11KW  | 500AH | 750AH | 1000AH | 1250AH | 1500AH | /      | /      | /      |

**WARNING!** Be sure that all inverters will share the same battery bank . Otherwise, the inverters will transfer to fault mode.


### 5-1. Parallel Operation in Single phase

Two inverters in parallel:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

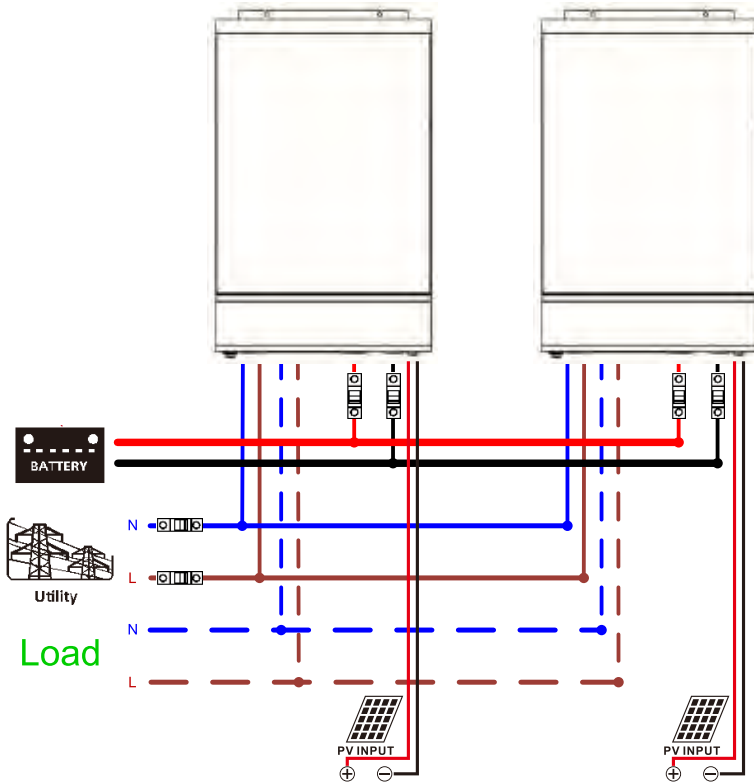


### Communication Connection

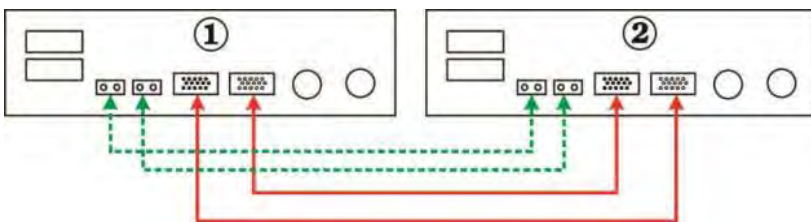




Three inverters in parallel:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

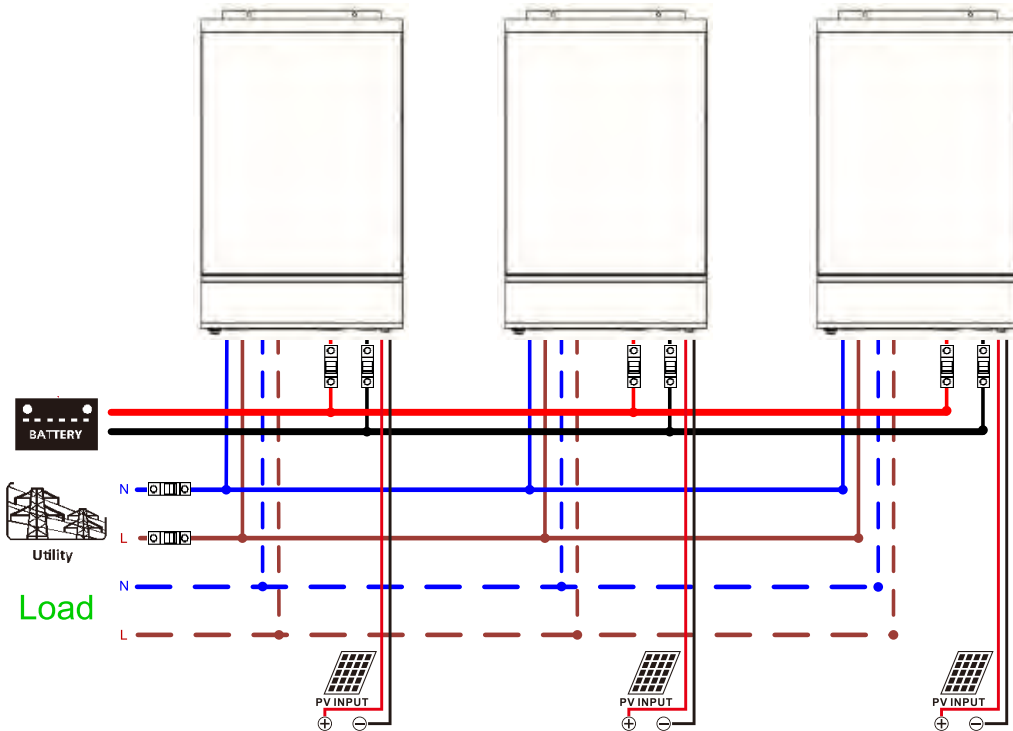


**Communication Connection**

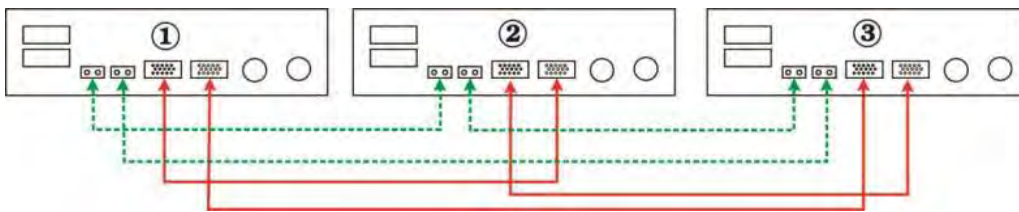


Four inverters in parallel:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

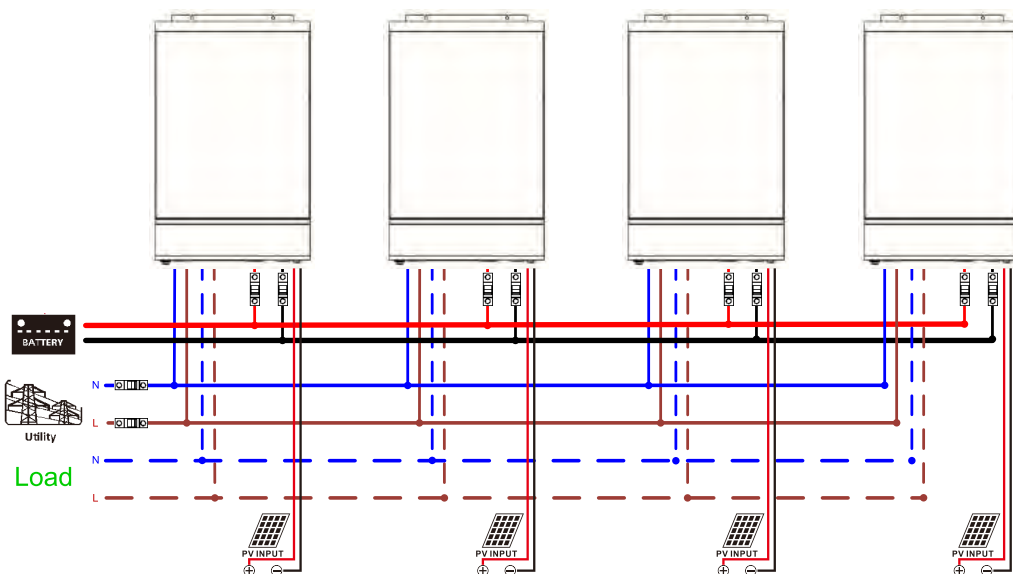


**Communication Connection**

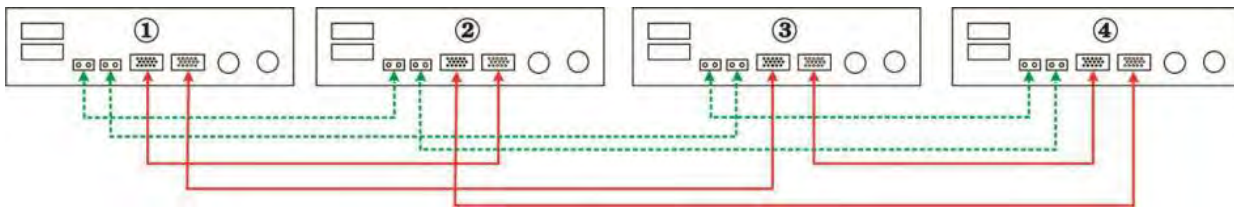


Five inverters in parallel:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

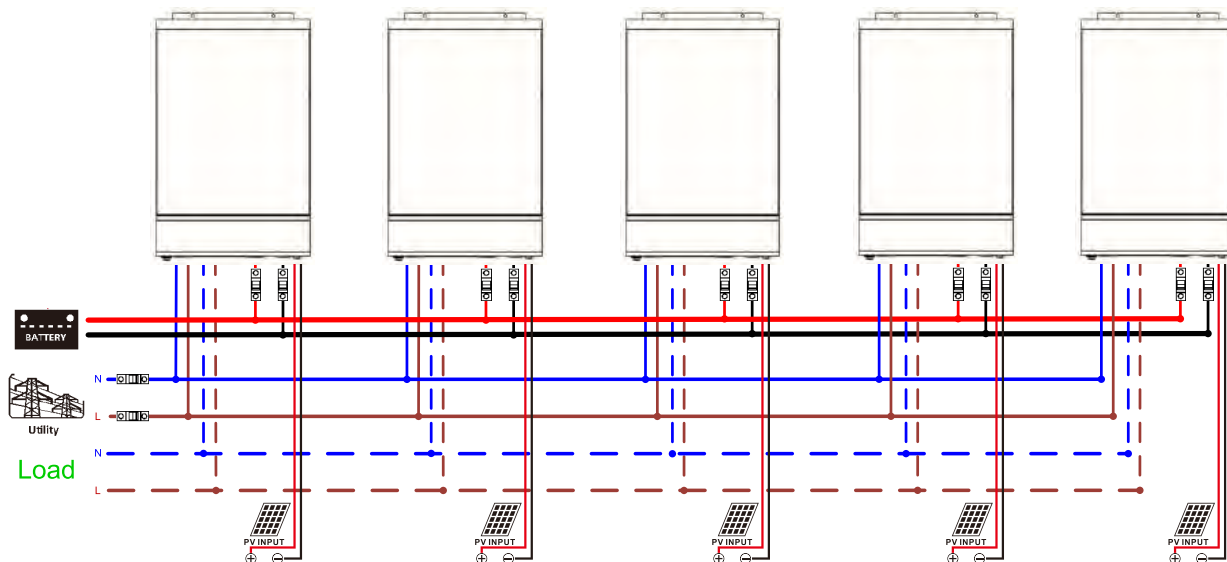


**Communication Connection**

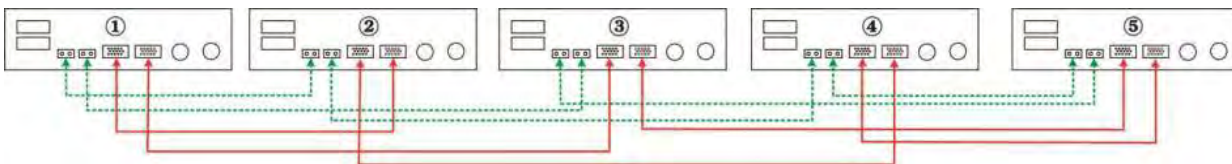


Six inverters in parallel:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

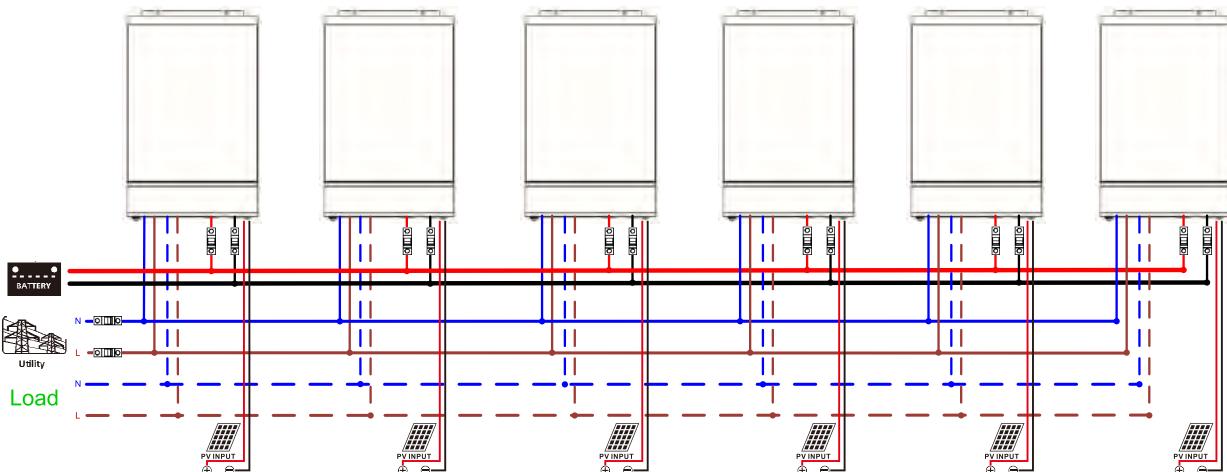


**Communication Connection**

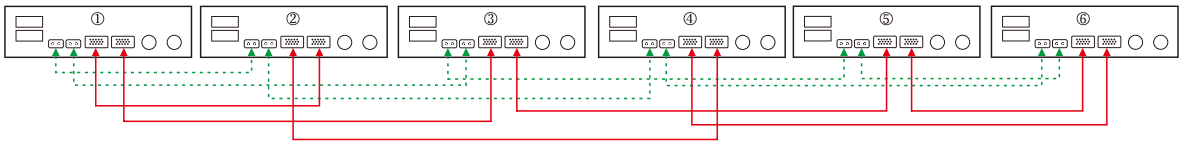


Seven to nine inverters in parallel: (Only for 5KVA/5.5KVA/6.2KVA)

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

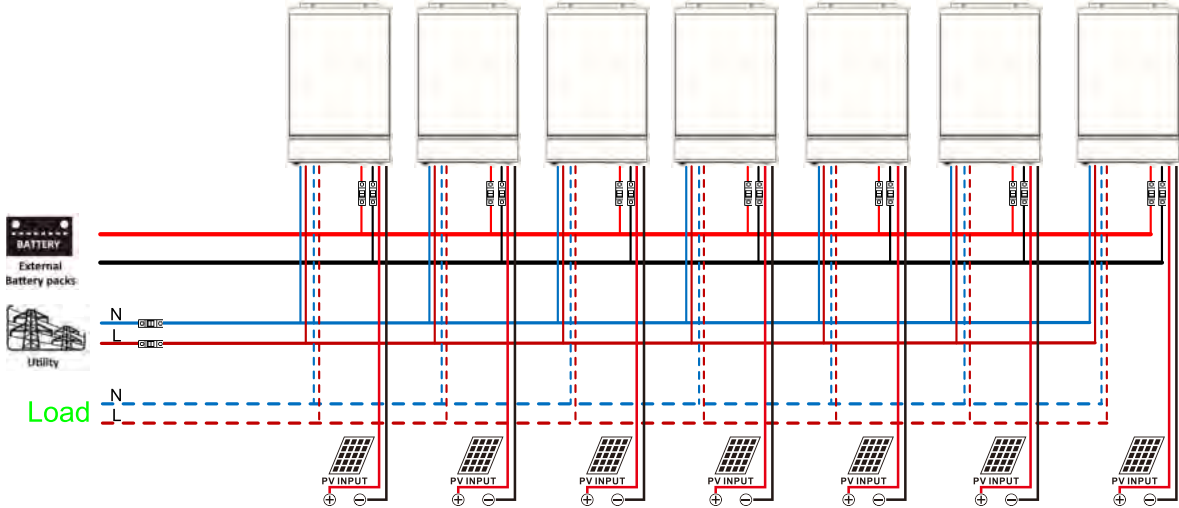


**Communication Connection**


Seven inverters in parallel



Eight inverters in parallel




Nine inverters in parallel




**5-2. Support 3-phase equipment**

Three inverters in each phase: (Only for 5KVA/5.5KVA/6.2KVA)

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

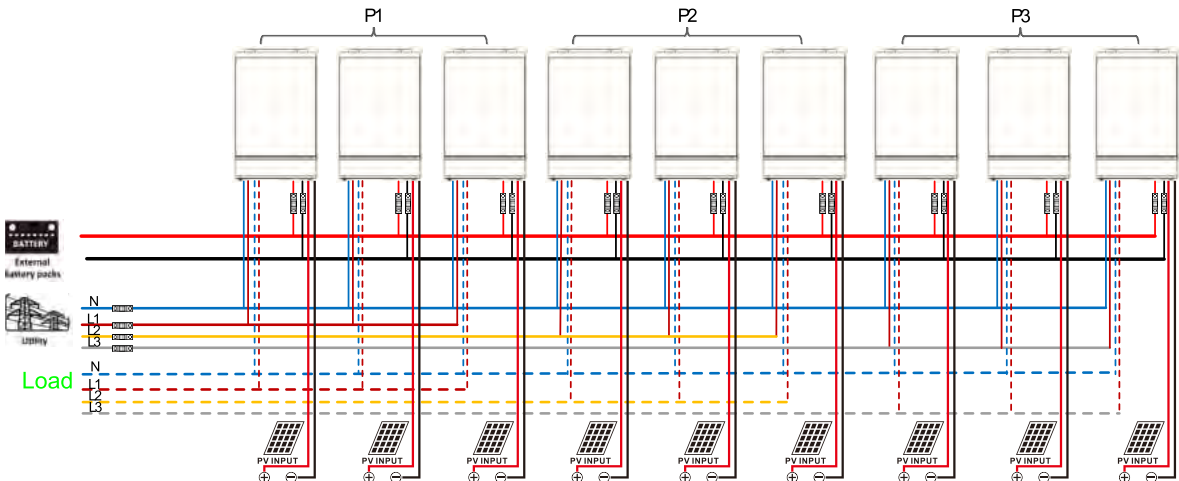


**Communication Connection**




Three inverters in one phase, three inverters in second phase and two inverters for the third phase:  
 (Only for 5KVA/5.5KVA/6.2KVA)

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

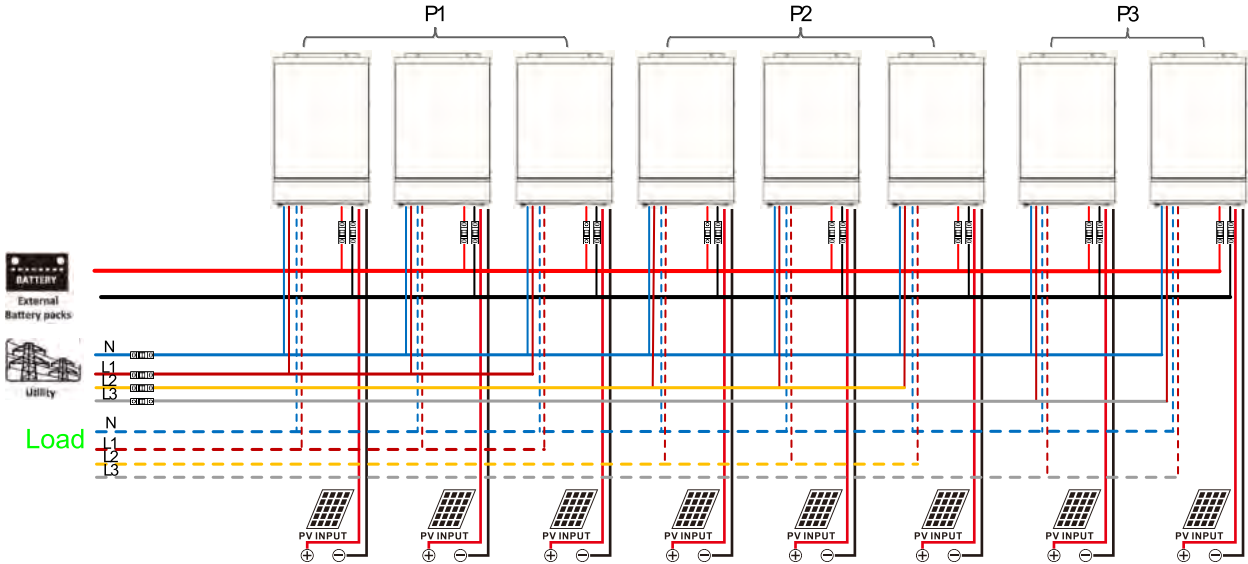


**Communication Connection**




Three inverters in one phase, two inverters in second phase P2 and two inverters for the third phase:  
 (Only for 5KVA/5.5KVA/6.2KVA)

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

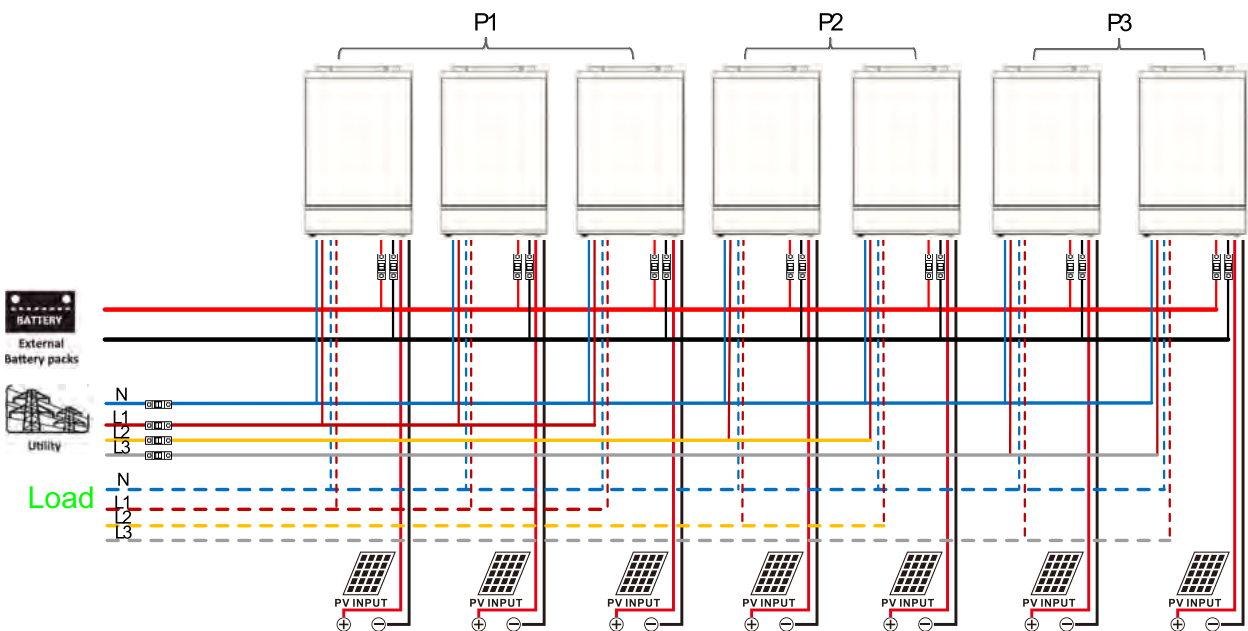


Communication Connection




Two inverters in each phase:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

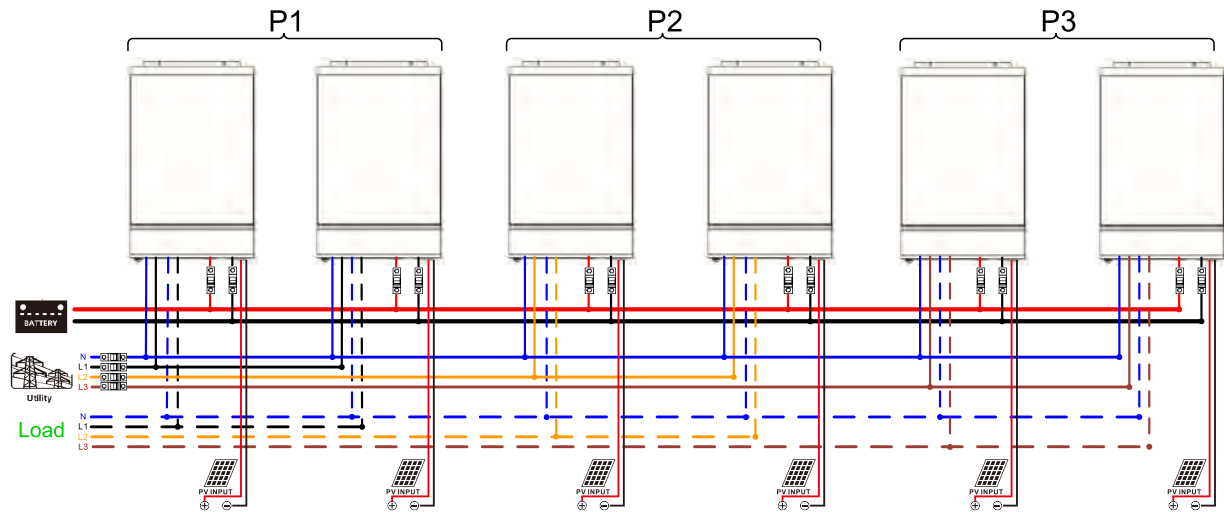


Communication Connection

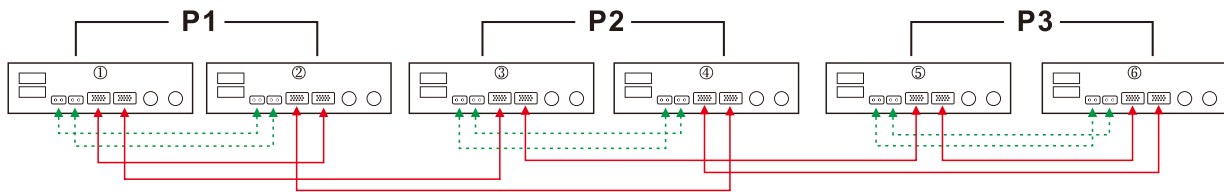


Four inverters in one phase and one inverter for the other two phases:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

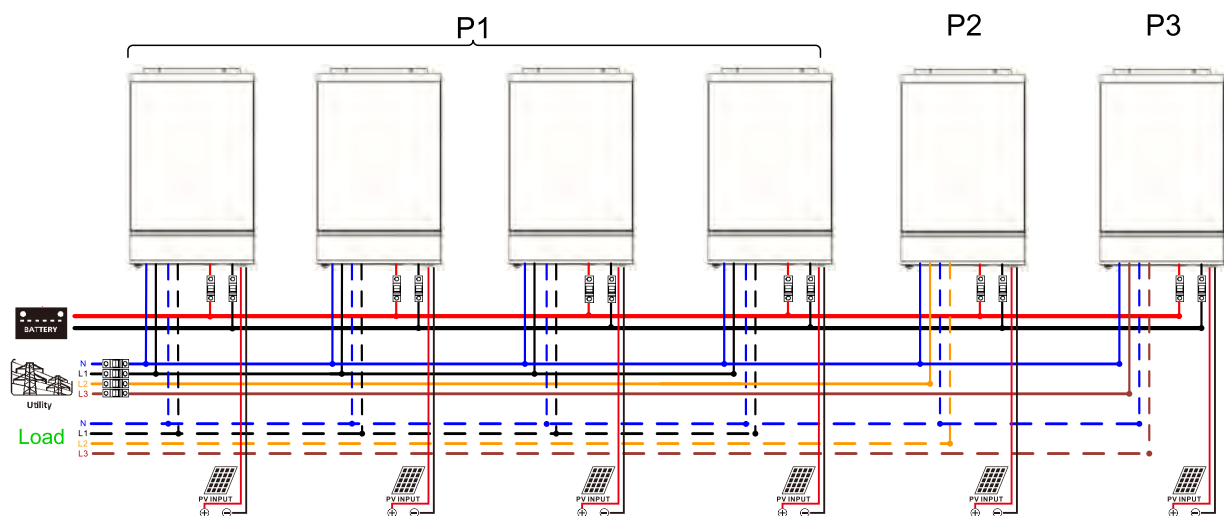


### Communication Connection

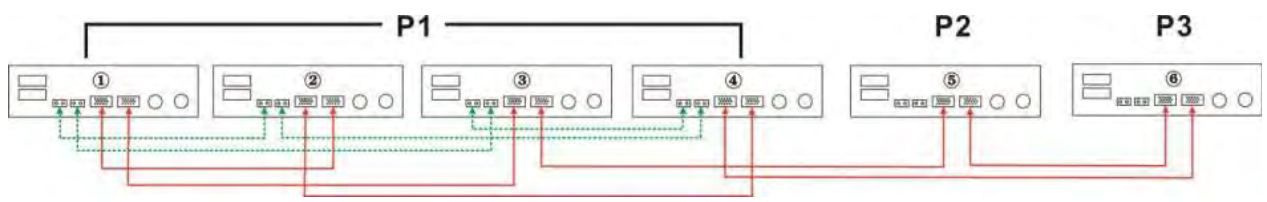


Three inverters in one phase, two inverters in second phase and one inverter for the third phase:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

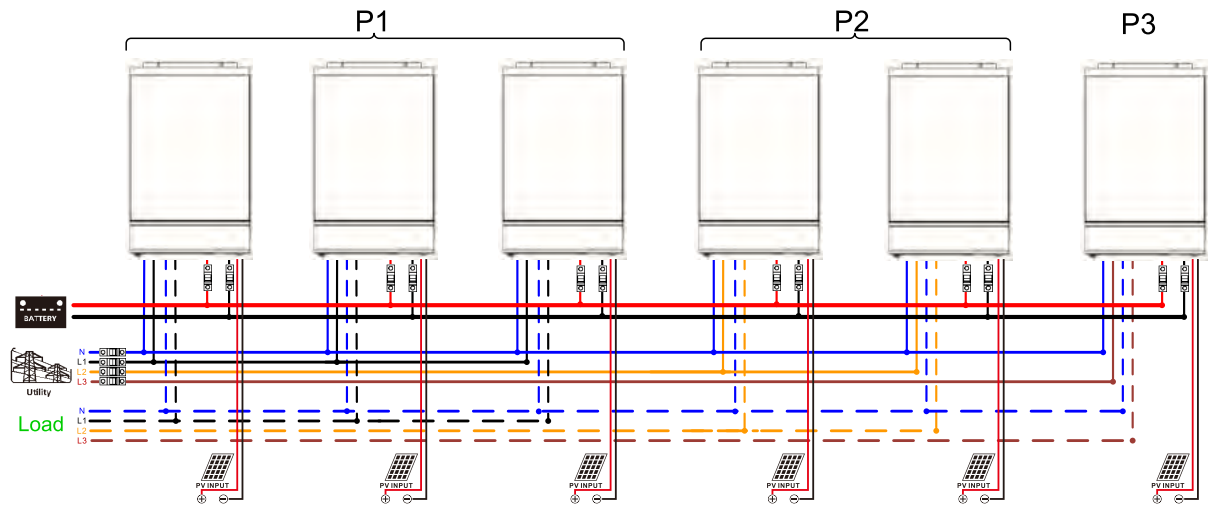


### Communication Connection

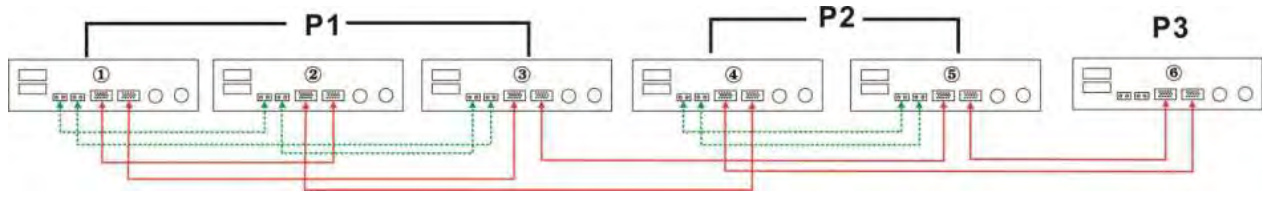


Three inverters in one phase and only one inverter for the remaining two phases:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

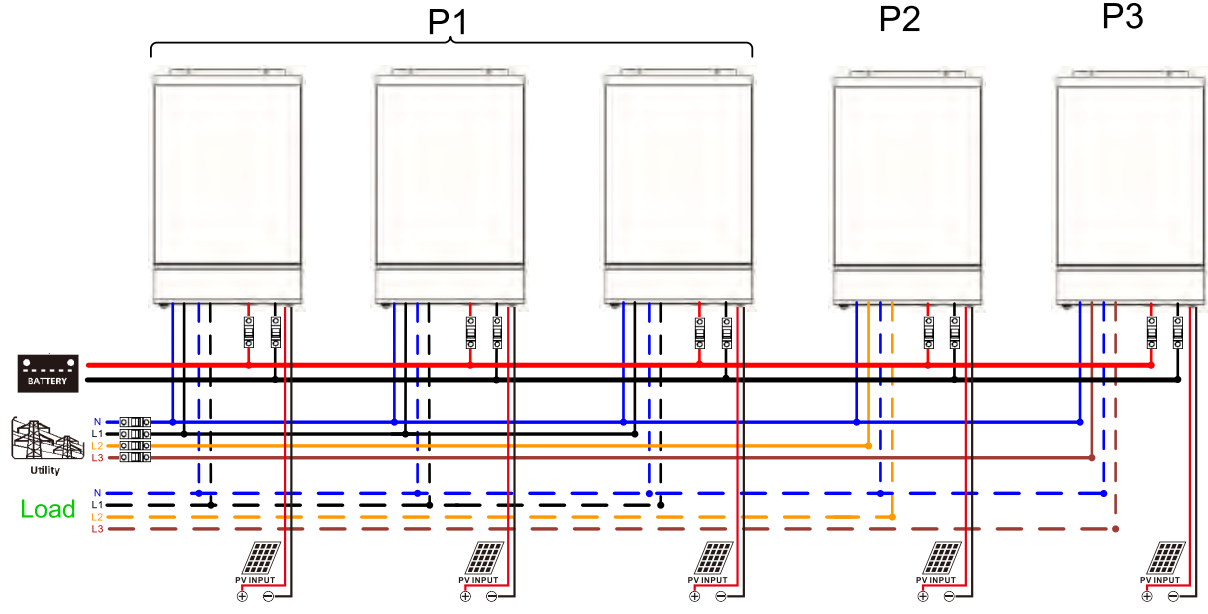


**Communication Connection**

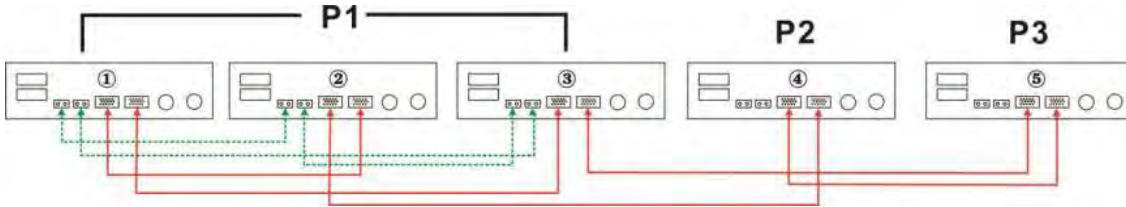


Two inverters in two phases and only one inverter for the remaining phase:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

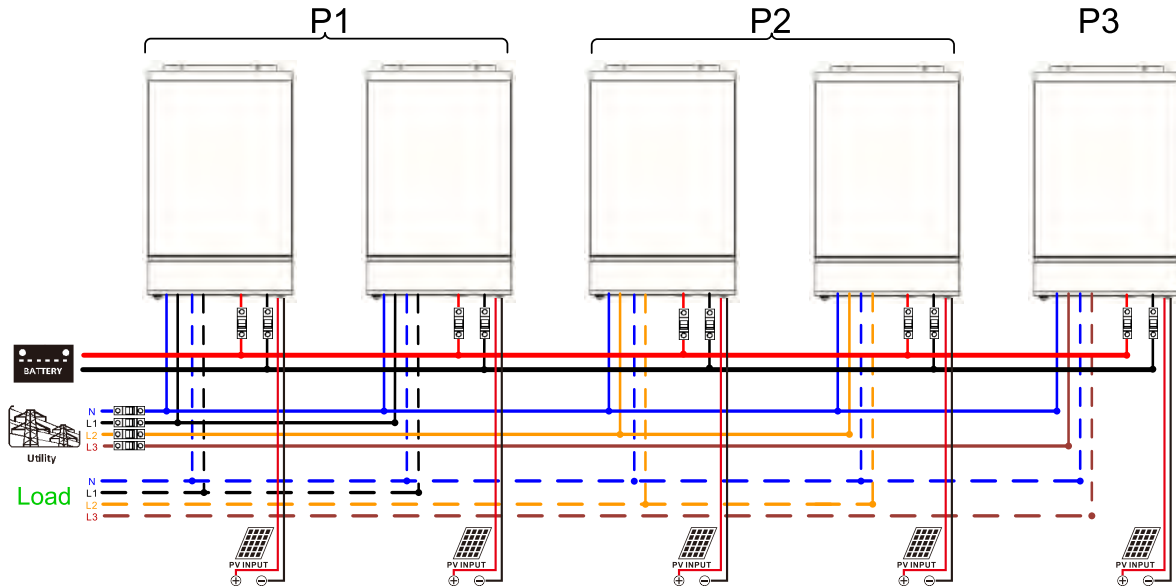


**Communication Connection**

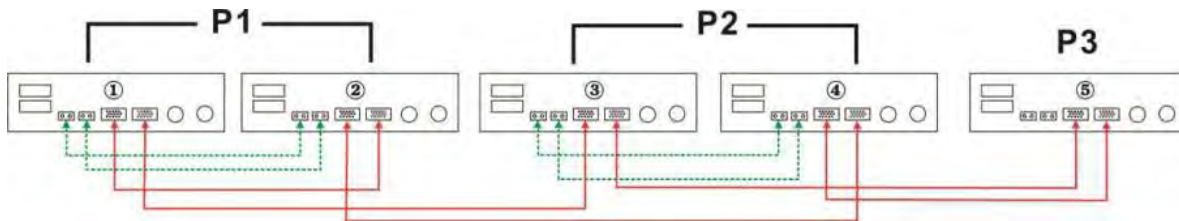


Two inverters in one phase and only one in the remaining phases:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

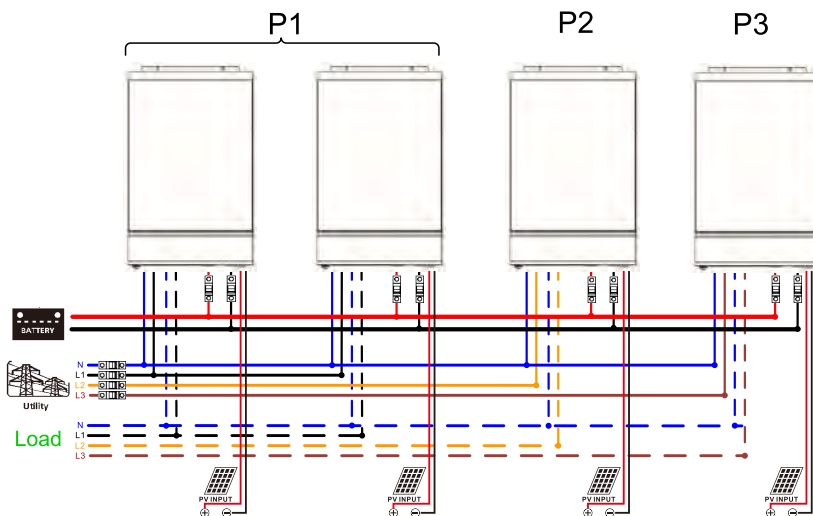


## Communication Connection

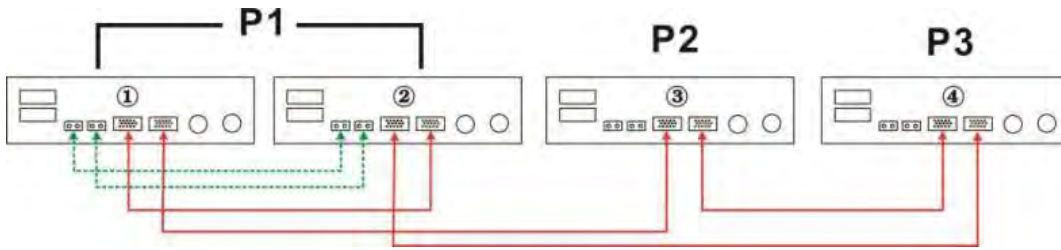


One inverter in each phase:

**Power Connection**(Each photovoltaic panel needs to be connected to an independent

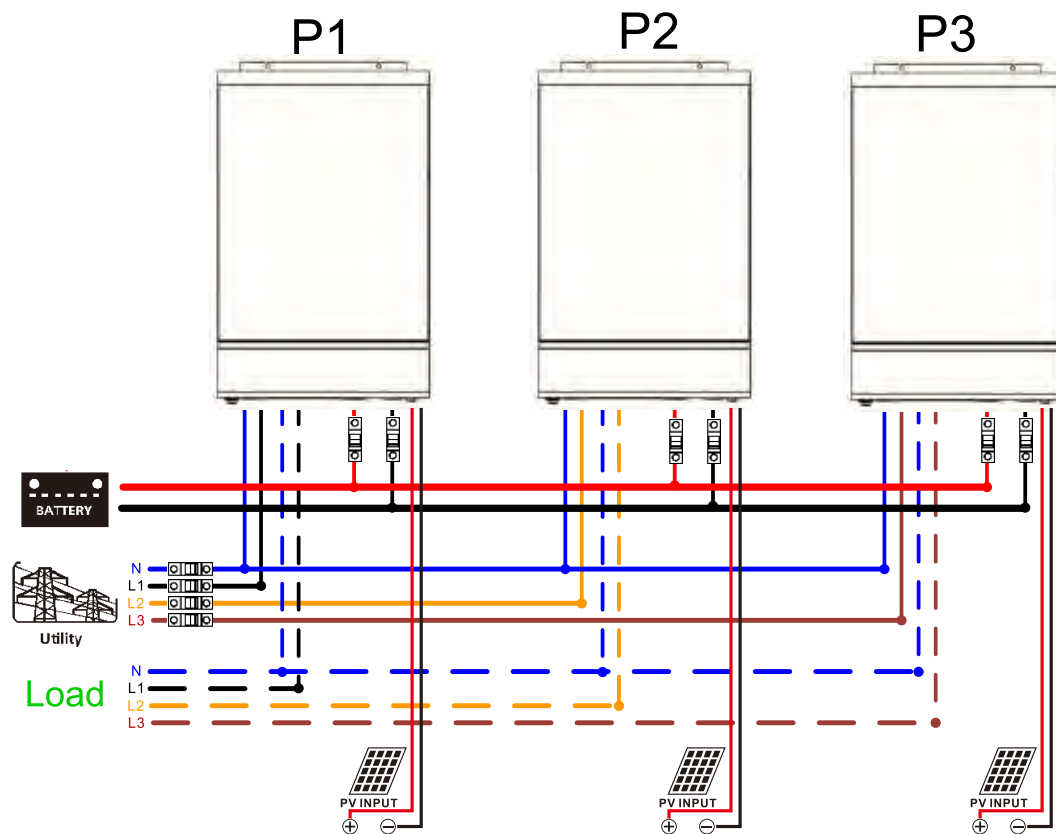

## Communication Connection

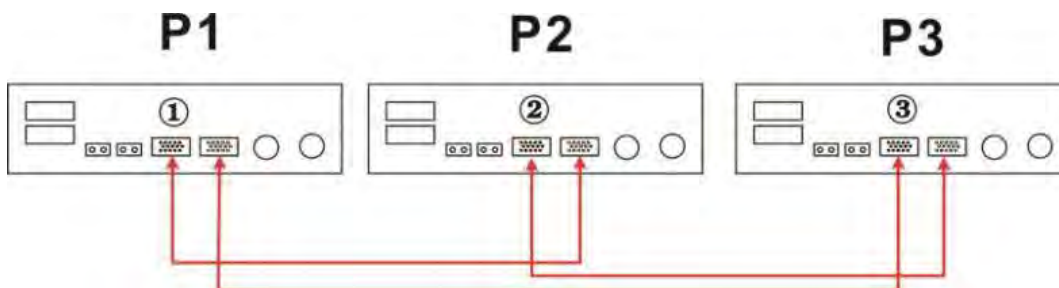

**WARNING:**Do not connect the current sharing cable between the inverters which are in different phases. Otherwise, it may damage the inverters.

## 6. PV Connection






Please refer to user manual of single unit for PV Connection

**CAUTION:**Each inverter should connect to PV modules separately.













## 7.LCD Setting and Display

### Setting Program:

| Program | Description  | Selectable option   |   |
|---------|--|---|---|
| 04      | AC output mode<br>*This setting is only available when the inverter is in standby mode (Switch off). | Single:<br>    | When the units are used in parallel with single phase, please select "PAL" in program 4.<br><br>It is required to have at least 3 inverters or maximum 9 inverters to support three-phase equipment. It's required to have at least one inverter in each phase or it's up to four inverters in one phase please-2 for detailed information. Please select "3P1" in program 4 for the inverters connected to phase, "3P2" in program 4 for the inverters connected to L2 phase and "3P3" in program 4 for the inverters connected to L3 phase.<br><br>Be sure to connect share current cable to units which are on the same phase. Do NOT connect share current cable between units on different phases.<br><br>Besides, power saving function will be automatically disabled. |
|         |  | Parallel:<br>  |   |
|         |  | L1 phase:<br>  |   |
|         |  | L2 phase:<br>  |   |
|         |  | L3 phase:<br> |   |

### Fault code display

| Fault Code | Fault Event                                       | Icon on   |
|------------|---|---|
| 60         | Power feedback protection                         |  |
| 71         | Firmware version inconsistent                     |  |
| 72         | Current sharing fault                             |  |
| 80         | CAN fault   |  |
| 81         | Host loss   |  |
| 82         | Synchronization loss                              |  |
| 83         | Battery voltage detected different                |  |
| 84         | AC input voltage and frequency detected different |  |
| 85         | AC output current unbalance                       |  |
| 86         | AC output mode setting is different               |  |

## 8.Commissioning

### Parallel in single phase



Step 1: Check the following requirements before commissioning:

- ⌘ Correct wire connection
- ⌘ Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.

Step 2: Turn on each unit and set "PAL" in LCD setting program 4 of each unit. And then shut down all units.

**NOET:** It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.

Step 3: Turn on each unit.
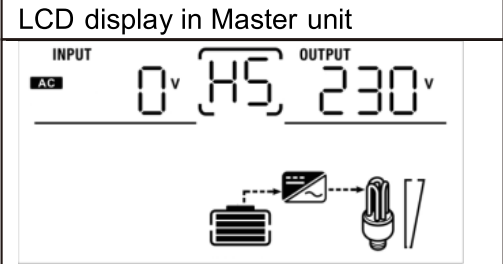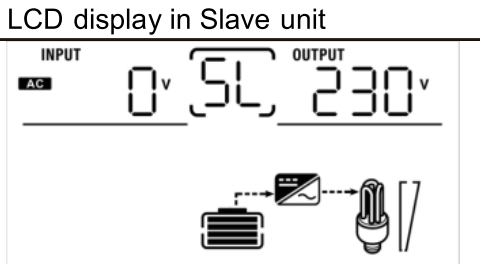
| LCD display in Master unit  | LCD display in Slave unit  |
|---|--|
|  |  |

**NOTE:** Master and slave units are randomly defined.





# MEDALPOWER

Leave Power for Medal Power

[www.medal-power.com](http://www.medal-power.com)

